



NOKIA 6340i



User Guide

Nokia 6340i

User Guide

Phone notes

My Nokia 6340i information		Information source
My number		Wireless provider
Phone serial number (ESN)		On back of your phone, beneath the battery
International Mobile Equipment Identifier (IMEI)		
Voicemail number		Wireless provider
Wireless provider customer care		Wireless provider
Message center number		Wireless provider

The wireless phone described in this guide is approved for use in GSM 850, GSM 1900, TDMA, and AMPS networks.

LEGAL INFORMATION

Part No. 9355983, Issue No. 1

Copyright ©2003 Nokia. All rights reserved.

Nokia, Nokia Connecting People, the Nokia Original Accessories logos, Nokia 6340i, Snake II, Pass 'n Rush, Bumper, and Pairs II are trademarks or registered trademarks of Nokia Corporation. All other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Printed in Canada 01/2003

US Patent No 5818437 and other pending patents.

T9 text input software Copyright ©1999-2002. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

The information contained in this user guide was written for the Nokia 6340i phones. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

EXPORT CONTROLS

This product contains commodities, technology and/or software that is subject to the export licensing and controls laws and regulations of the United States, including the United States Export Administration Regulations, as well as those of various foreign agencies and authorities. Any export of this product from the United States must comply with such regulations, as well as applicable laws of the country of import and any subsequent re-export, and any diversion contrary to U.S., Canadian or any other applicable law is prohibited. In connection with any export, you must comply with all applicable export laws, restrictions and regulations of the United States, Canada and any other applicable foreign agencies or authorities, and may not export, or transfer for the purpose of reexport, this product in violation of any such restrictions, laws or regulations, or without all necessary approvals. You may not export this product to any prohibited or embargoed country or to any denied, blocked or designated person or entity as mentioned in applicable U.S. or foreign laws or regulations. By receiving this product, you agree to comply with these terms and conditions.

FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

Contents

1	Safety first	1
	About accessories	2
2	Quick guide	3
	Menu shortcuts	4
3	Welcome to Nokia	5
	Get the most out of this guide	5
	Sign up with a wireless provider	6
	Before you contact Nokia	6
	Dynamic memory use	7
	About the antenna	7
4	Nokia 6340i a glance	8
	Remove the back cover	9
	Install the SIM card	9
	Install the battery	10
	Charge the battery	10
	Remove the battery	12
	Remove the SIM card	13
	Switch on the phone	14
	Switch off the phone	14
	Set the time and date	14
	The Start screen	15
	Use the selection and scroll keys	17
	The volume key	18
	Make and answer calls	18
	Help text	19
	Navigate your phone's menus	19
	Accessibility solutions	20
	Full menu shortcuts	22

5	Your phone's keypad	27
	Enter characters and numbers	27
6	The Phone book	29
	Open the Phone book	29
	Customize the Phone book	35
	Your phone's memory	37
	Copy Phone book entries	38
	View service numbers	39
7	Call log	40
	Call log options	40
8	Use voicemail	44
	Save your voice mailbox number	44
	Call and set up your voicemail	44
	Automate voicemail	45
9	Advanced features	47
	In-call options	47
	Call waiting	49
	Send own caller ID with next call	50
	Call forwarding	50
	Voice dial	52
	Voice commands	54
	Voice recorder	56
	1-touch dialing	58
	International dialing	59
10	Customize your phone	60
	Set the display language	60
	Profiles	60
	Accessibility options	63
	Optional headsets	66
	Audio settings	67
	Download a ringing tone	68

11	Manage phone security	69
	Lock and unlock the keypad (Keyguard)	69
	Security levels	69
	Fixed dialing	70
	Access codes	72
12	Messages	75
	Tips for composing a message	76
	Write and send a message	79
	Read messages	79
	E-mail	81
	Compose and send e-mail	82
	Picture messages	83
	Templates	85
	Organize messages with folders	87
	Delete messages	89
13	Your personal organizer	90
	Calendar	90
	Make a to-do list	95
	Wallet	96
	Create a Wallet card	98
	Set the time and date	102
	Alarm clock	103
	Use the Calculator	104
14	Your phone and other devices	107
	Infrared basics	107
	Send and receive information	108
	Business cards	108
	PC Connectivity	110
15	Fun and games	112
	Games main menu	112
	Start a game	113

16	Accessories	114
17	Reference information.	117
	Batteries and chargers.	117
	Important safety information.	119
18	Care and maintenance.	124
	Troubleshooting	125
19	Frequently Asked Questions (FAQ).	126
20	Glossary	128
21	Technical information	131
	Nokia One-Year Limited Warranty.	132
	Index	135

1 Safety first

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



INTERFERENCE

All wireless phones may get interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Do not use your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



USE SENSIBLY

Use only in the normal position. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



OBSERVE INFRARED PRECAUTIONS

Do not point the IR beam at anyone's eyes or allow it to interfere with other IR devices.



ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.



BACKUP COPIES

Remember to make backup copies of all important data.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



CALLING

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call, press . To answer a call, press .



EMERGENCY CALLS

Make sure the phone is switched on and in service. Press and hold to return to the **Start** screen where an emergency call can be made. Enter the emergency number and press . Give your location. *Do not* end the call until told to do so.

• ABOUT ACCESSORIES

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-7U and ACP-8U chargers.



Warning: Use only batteries, chargers and accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous. For availability of approved accessories, please check with your dealer. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

2 Quick guide

Make a call	Enter phone number, press 
Answer a call	Press 
Answer a call with call waiting	Press  or Options and select Answer call
End a call	Press 
Ignore a call	Press Silence when your phone rings
Redial	Press  twice
Adjust call volume	Press up or down on the side volume key
Use the in-call menu	While in a call, press Options
Use 1-touch dialing	Press and hold any key 2 through 9
Save a name and number	Enter a number, press Options and select Save , then enter a name and press OK
Recall a name/number	Press Names , select Find . Enter name and press Find or List
Recall a name/number during a call	Press Options , scroll to New call , press Select , press Find , enter the first letter of the name to find
Check voice mail	Press and hold  OR dial your voice mailbox number
Send a text message	Press Menu 01-1 . After a pause, write the message. Press Options , scroll to Send , press Select , enter the recipient's number, press OK
Send an E-mail message	Refer to information supplied by your service provider.
Read new message	Press Show , then press Select
Reply to a message	Press Options , select Reply , write the reply, press Options , select Send , and press OK
Reply to an E-mail message	Refer to information supplied by your service provider.
Send a business card	Recall a name from the Phone book. Press Details , then press Options , select Send bus. card , select Via text msg. Enter the recipient's number or press Find to retrieve a number from the Phone book. Press OK .

• MENU SHORTCUTS

1 MESSAGES



Note: Messages menu requires pressing "0"

Write message.....	01-1
Write e-mail	01-2
Inbox	01-3
Outbox.....	01-4
Archive.....	01-5
Templates.....	01-6
My folders	01-7
Delete messages	01-8
Voice messages.....	01-9
Service command editor...	01-10
Message settings.....	01-11

2 CALL LOG

Missed calls.....	2-1
Received calls	2-2
Dialed numbers.....	2-3
Delete recent call lists	2-4
Call timers.....	2-5

3 PROFILES

Normal.....	3-1
Silent	3-2
Meeting	3-3
Outdoor	3-4
Pager	3-5

4 SETTINGS

Alarm clock	4-1
Time settings.....	4-2
Call settings.....	4-3
Phone settings.....	4-4
Tone settings.....	4-5
¹ Accessory settings.....	4-6

Security settings	4-7
Restore factory settings	4-8

5 VOICE

Voice recorder	5-1
Record	5-1-1
Recordings list	5-1-2
Voice commands	5-2
Profiles.....	5-2-1
Voice mailbox.....	5-2-2
Infrared.....	5-2-3
Recorder	5-2-4

6 ORGANIZER

Calendar	6-1
To-do list	6-2
Wallet.....	6-3

7 CALCULATOR

8 GAMES

Select game	8-1
Snake II	8-1-1
Pass 'n Rush.....	8-1-2
Bumper	8-1-3
Pairs II	8-1-4
Settings.....	8-2

9 INFRARED

Infrared.....	9
---------------	---

10 SERVICES

¹ Menu 4-6 appears only when an accessory, such as TTY or headset is connected.



3 Welcome to Nokia

Congratulations on your purchase of the Nokia 6340i wireless phone. The Nokia 6340i phone can be connected to a PC, laptop, or other device using the data cable or built-in IR port. For more information, please refer to the PC Connectivity Guide.

The PC Connectivity Guide, Nokia PC Suite, and all related software can be downloaded from the Download Software section of **www.nokia.ca** at no charge.

• GET THE MOST OUT OF THIS GUIDE

The tips that follow can help you get the most from this guide as you learn to use your phone.

Follow graphic clues

Icons appear throughout this guide to alert you of important information or to provide useful tips.



Tip: Indicates a shortcut or alternate method of doing something.



Note: Explains a feature or points out an important concept.



Important: Indicates critical information on using a feature.



Caution: Warns you when you may lose information.



Warning: Helps you avoid personal injury, damage to the phone, or property damage.

Look for updates

From time to time, this guide is updated to reflect changes. The latest version may be available at **www.nokia.ca**.

• SIGN UP WITH A WIRELESS PROVIDER

To use the network services available in your phone, you will need to sign up with a wireless provider. In many cases, the wireless provider will make available descriptions of their services and instructions for using features such as:

- Voice mail and voice privacy
- Call waiting, call forwarding, and caller ID
- Messaging
- News and information services
- Selected Internet services

Wireless providers may differ in their support of features. Before you sign up, make sure a wireless provider supports the features you need.


• BEFORE YOU CONTACT NOKIA

If you need help, Nokia Customer Care is available for assistance. Before calling, however, please read "Frequently Asked Questions (FAQ)" on page 126.

We also recommend that you write down the following information on the inside cover of this guide and have it available if you call. The information can be found on your phone's label, which is on back of the phone, beneath the battery.

- The International Mobile Equipment Identifier (IMEI)
- The Electronic Serial Number (ESN)

We also ask that you write down your postal code.

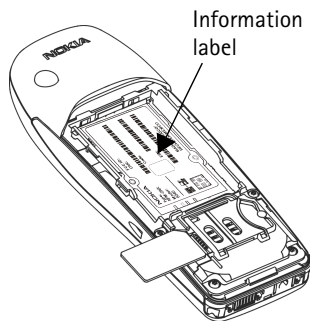

Have your phone or accessory handy

Please have your phone or accessory with you when contacting Nokia.

Customer Care Centre, Canada

Nokia Products Ltd.
601 Westney Road South
Ajax, Ontario L1S 4N7
Tel: 905-427-1373
1-888-22-NOKIA
(1-888-226-6542)
Fax: 1-905-427-1070
Web site: www.nokia.ca


• DYNAMIC MEMORY USE

Some features in your Nokia 6340i phone use a common pool of memory (storage capacity) called dynamic memory. When any of these features is used, there is less available memory for other features, which are also dependent on dynamic memory. This is especially true with heavy use.


For example, entering a large number of Phone book entries may use most of the available dynamic memory. Consequently, if you attempt to create a calendar note or save a business card, your phone may display a message saying Memory Full. To proceed, you would need to delete some of the information or entries occupying the available dynamic memory.

• ABOUT THE ANTENNA

Your phone has a built-in antenna. As with any other radio transmitting device, avoid touching the antenna while the phone is powered up. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than necessary.

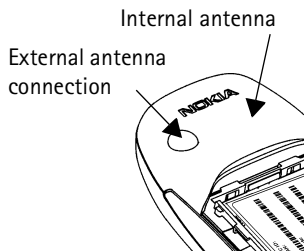


4 Nokia 6340i a glance

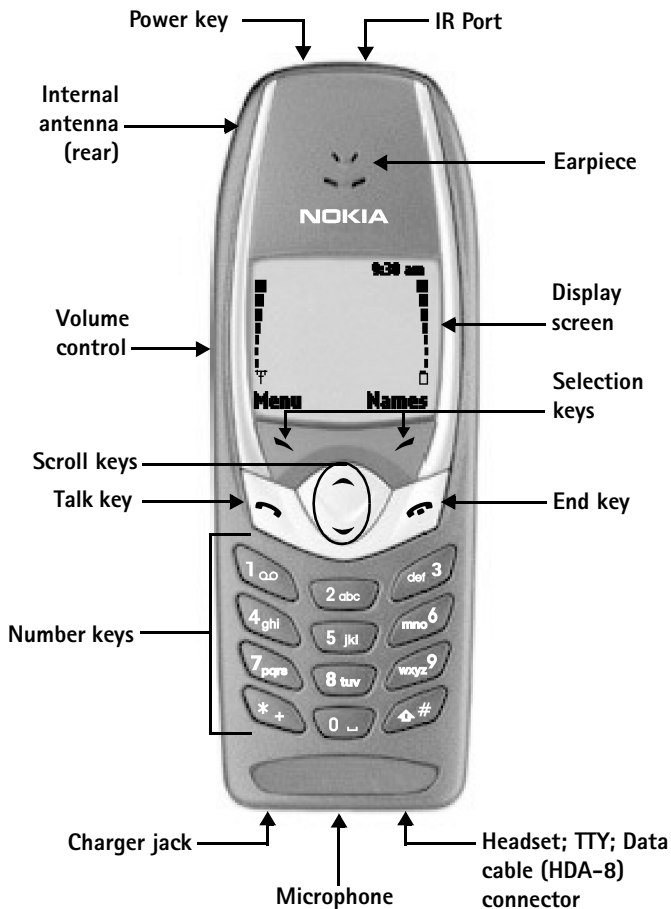

• REMOVE THE BACK COVER

- 1 With the phone facing away from you, grip the bottom end with one thumb while pressing the cover release with the other.
- 2 Slide the cover toward the bottom end of the phone (about 1/4 inch) until it stops. Lift the cover to remove.

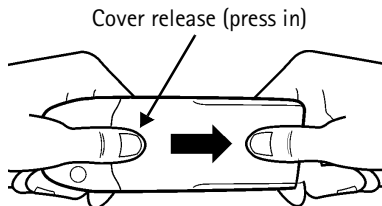

• INSTALL THE SIM CARD

The SIM slot is between the battery compartment and the bottom end of the phone.




Warning: If the battery is in the phone, remove the battery before attempting to install the SIM card. See "Remove the battery" on page 12 for battery removal instructions.



Note: The SIM card should be inserted beveled corner first with the gold contacts facing down.

- Slide the SIM card into the empty SIM slot until the SIM card retaining latch closes behind the SIM card.


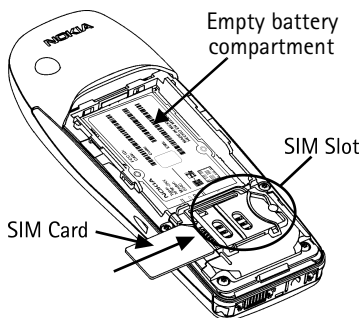


• INSTALL THE BATTERY




Note: The SIM card must be installed *before* installing the battery.

- 1 Position the battery so the gold contacts match up with those on the phone. The battery label should be facing *away* from the phone.
- 2 Insert the battery, contact end first into the battery slot.
- 3 Press the other end of the battery into place.

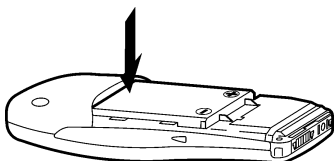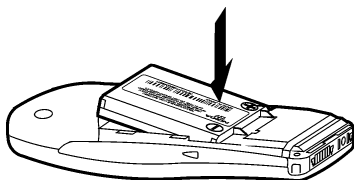


- 4 Replace the cover and slide it toward the top of the phone until it locks into place.

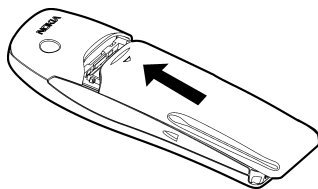

• CHARGE THE BATTERY

- 1 Plug the charger transformer into a standard AC outlet.

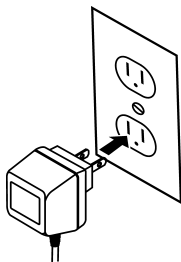

- 2 With your phone on or off, insert the charger's output into the round connector at the bottom end of the phone.
- After a few seconds, the battery indicator in the display starts to scroll from bottom to top.
- When the battery is 80% full, the bar on in the display stops scrolling and **Battery full** appears (if the phone is on).
- Unplug the phone and charger once charging is complete.



IMPORTANT BATTERY INFORMATION



Important: Your phone is powered by a rechargeable battery.

Use only batteries approved by Nokia and recharge your battery only with the chargers approved by Nokia. Never use any charger or battery which is damaged.

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

The BLB-3 battery doesn't need a full discharge before recharging.

PROLONG THE BATTERY

Use the following guidelines to obtain the best performance from your battery:

- With your phone turned off, charge your new battery for three hours before its first use. Use the battery until it is fully discharged. Repeat this procedure twice for a total of three charging cycles.
- Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles. Battery operation time may be less than the estimated times during the first charges. This condition is normal.

- You can use your phone while the battery is charging. However, if the battery is completely empty, it may need to recharge a few minutes before you can make or receive calls or the battery indicator appears.
- After the first charge, you can make and receive calls during the charging cycle, but the calls interrupt the charge. When the phone call ends, the charge will resume.
- The bars on the screen stop scrolling and remain constant when the phone is fully charged. If you leave the phone connected to the charger, the battery receives an additional charge. If you switch the phone on when charging is complete, the message **Battery full** momentarily appears in the display.




Note: The battery will accept a "trickle charge" for an additional two hours.

Charging time depends on the charger and battery. For example, charging time for the BLB-3 battery with the ACP-7U charger is about 4 hours.

• REMOVE THE BATTERY

- 1 Remove the back cover as described on page 9.
- 2 Pull the battery out with your fingers from the top end, as shown in the illustration.

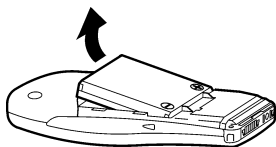


Warning: Only use your hands to remove the battery. Do not use an object such as a coin or knife, as either can damage both the phone and the battery.

• REMOVE THE SIM CARD


- 1 Remove the back cover and battery as described on page 9 and page 12.

- 2 Push the SIM card out of the slot as far as you can (about 1/4 of an inch) with your thumb.

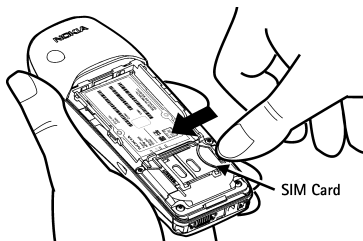

Note: Keep your thumb in place to prevent the SIM card from sliding back into the slot while you perform the next step.

- 3 Pull the SIM card from the open end of the slot with your fingers.

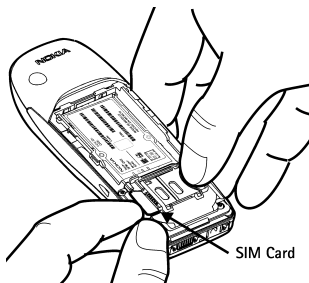


Warning: Keep all SIM cards out of reach of small children.

• SWITCH ON THE PHONE

- Press and hold the power key on top of the phone for at least 2 seconds.



Warning: Do not power-up the phone where wireless phone use is prohibited or where the use of the phone could cause interference or danger.

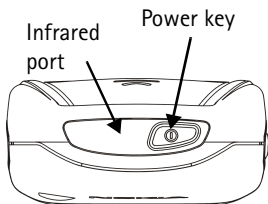

• SWITCH OFF THE PHONE

- Press and hold the power key on top of the phone for at least 2 seconds.

• SET THE TIME AND DATE

When you power-up your phone for the first time, or when you remove and replace the battery, you will be prompted to set the time and date.




Note: If "PIN code request" is set to "On," you will need to enter the 4-digit PIN code and press **OK**. See "PIN code request" on page 73 for more information.

- 1 Enter the correct time and press **OK**.
- 2 Enter the correct date and press **OK**. After a brief pause, the **Start** screen appears in your display.

• THE START SCREEN

The **Start** screen is the "home base" for your phone and indicates it is in idle mode.

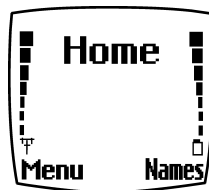

What's on the Start screen

HOME	Your wireless provider's name may appear here.
	Signal strength - Left side of the Start screen. A higher bar indicates a stronger signal.
	Battery charge level - Right side of the Start screen. A higher bar indicates more power in the battery.
Menu	Press the left selection key () under Menu to enter the menu list.
Names	Press the right selection key () under Names to enter the Phone book.
	Press either one of the scroll keys at the Start screen to display any entries in your Phone book.

Indicator icons

Your phone uses icons to indicate status, alert you of a message or meeting, and more.

Icon	Indicates...	Icon	Indicates...
	You are in an active call		The Silent profile has been selected
	You are in lowercase text entry mode (predictive text off)		Keyguard is active
	You have voice messages waiting		You have a text or picture message
	You have a call waiting (when blinking)		You are in uppercase text entry mode (predictive text off)
	You are in sentence case text entry mode (predictive text off)		You are in number entry mode
	Encryption is on		An alarm is set
	A Memo note is in your Calendar		A birthday note is in your Calendar
	A note is in your calendar to call someone		You have a meeting scheduled in your Calendar
	Predictive text is on		The highlighted entry (in Phone book) exists on the SIM card
	A message that you have composed has <i>not</i> been sent		A picture is attached to your message
	The message has been read.		When steady, IR is connected to a device
	When blinking, IR is searching for a device		Encryption is off
	A timed profile has been set.		

Return to the Start screen from any activity

- Press 


• USE THE SELECTION AND SCROLL KEYS

The left and right selection keys ( ) are beneath each corner of the display. The scroll keys ( ), are centered below the selection keys. A selection key's function is always defined by the text that appears above it in the display.

Press the left selection key () when **Menu** appears above it to display the **Messages** menu.

Page through the other main menus using the scroll keys ( ).

Press the right selection key () when **Names** appears above it to enter the Phone book.

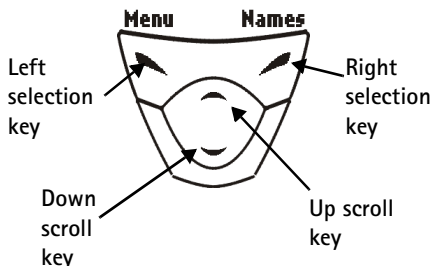

Tip: Press either scroll key ( ) from the **Start** screen to view any entries in your Phone book.


• THE VOLUME KEY

With the phone facing you, the volume key is located on the left side of the phone.

Adjust earpiece volume

When you press the volume key, a bar chart appears in the display indicating the present volume level.

- Press the top portion of the volume key to increase your call volume.
- Press the bottom portion of the volume key to decrease your call volume.

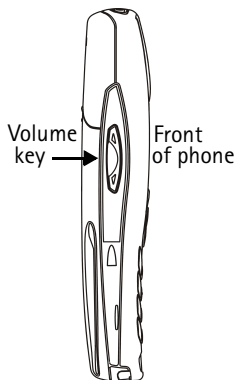

• MAKE AND ANSWER CALLS

Use the following table as a quick guide for basic functions.

Switch the phone on	Press and hold the power key on top of the phone for 2 seconds.  Warning: Do not power-up the phone when wireless use is prohibited or when the phone may cause interference or danger.
Make a call	1 Enter the area code and phone number. 2 Press . 3 Hold the phone with the earpiece over your ear and microphone near your mouth, or connect and use the headset before entering the number.
Answer a call	When your phone rings or vibrates, press  .
End a call	Press  .

Turn Keyguard on	Press Menu  . Keyguard prevents accidental calls.
Turn Keyguard off	Press Unlock  .
Silence a call OR Decline a call	You can mute the ringing tone of an incoming call without terminating the call. Press Silence and the ringing tone is muted. After pressing Silence , you then have the option to Decline the call. When you decline a call, the calling party hears a busy signal.

• HELP TEXT

The Nokia 6340i displays brief descriptions for most menu items. When you arrive at a feature or menu, pause for about 10 seconds. Use the scroll keys to page through the full help text, if necessary.

• NAVIGATE YOUR PHONE'S MENUS


You can navigate the menus and submenus in your phone using the *scroll method* or a *shortcut*.

Use the scroll method

- 1 At the **Start** screen, press **Menu**. The **Messages** menu appears in the display.
- 2 Page through the remaining menus using the scroll keys ( .

THE MENU NUMBER AND SCROLL BAR

As you page through menus, the **menu number** appears in the upper right corner of the display. A **scroll bar** with a tab appears below the menu number. This tab moves up or down as you page through the menus, and indicates your position within the menu structure.

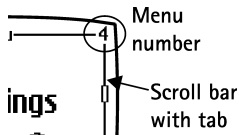

- When the menu you want appears in the display, press **Select**.

- 3 Once inside the menu, use the scroll keys ( ) to highlight an item or page through submenus. Press  to open a highlighted item or to enter a submenu. Press  to exit or return to the previous menu.

Use a shortcut

You can also go to almost any feature, option, or submenu directly from the **Start** screen using a "shortcut."

Press **Menu**, and within 3 seconds, enter the first number of the menu function you would like to access. Keep going until you have entered all the numbers.

For example: To turn on the **Alarm clock**, press **Menu 4-1-1**
(**Menu** > ⁴**Settings** > ¹**Alarm clock** > ¹**On**).

A complete list of shortcuts begins on page 22. Some features may not appear depending on service availability, or may require subscription to the feature in question. In such cases, the phone displays an error message. If you wish to subscribe to a feature that is currently disabled, contact your wireless provider.

• ACCESSIBILITY SOLUTIONS

Nokia is committed to pursuing accessibility solutions for all people, including individuals with disabilities. We maintain a site on the Internet that is dedicated to accessibility solutions. For more information about features, accessories, and other Nokia products designed with accessibility in mind, visit the Nokia Internet site at

www.nokiaaccessibility.com

Or, contact Nokia Customer Care at 1-888 22-NOKIA (1-888-226-6542).

Alternate format user guides

This user guide may be available in Braille, large print, audiocassette, and on disk in a format that can be read by a screen reader.

To request a User Guide in any of these formats, call Nokia Customer Care at 1-888-22-NOKIA (1-888-226-6542) or 905-427-1373.

LPS-1 Mobile Inductive Loopset


The LPS-1 loopset gives hearing-impaired users access to digital telephony. People using a T-coil equipped hearing aid can make and receive calls without noise interference.

HOW THE LOOPSET WORKS

The LPS-1 transmits sound to any hearing aid equipped with a T-coil. The sound from the phone is amplified and background noise is eliminated.

Wear it around your neck, connect it to your phone, and speak directly toward the microphone on the loopset.

For more details, refer to the booklet that comes with the LPS-1.

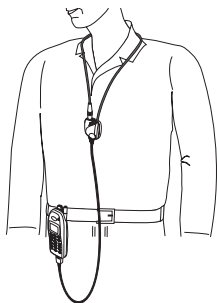

Note: The Loopset can be purchased separately as an accessory.

Other accessibility features

Besides an intuitive interface and TTY/TDD capabilities, other accessibility features of the Nokia 6340i phone include:

- A nib, or raised dot on *top* of the five key for keypad reference
- Tactile feedback whenever you press a key
- The ability to send and receive short messages
- 1-touch dialing
- The ability to amplify higher frequencies using the equalizer function
- Caller groups to aid in caller identification



Note: For instructions on setting up accessory profiles, and connecting and using a TTY/TDD device, see "Accessibility options" on page 63.

• FULL MENU SHORTCUTS

1 MESSAGES



Note: Messages is the only menu that requires pressing "0".

Write message.....	01-1
Write e-mail	01-2
Inbox	01-3
Outbox.....	01-4
Archive.....	01-5
Templates.....	01-6
My folders	01-7
Delete messages	01-8
All messages.....	01-8-1
Inbox	01-8-2
Outbox.....	01-8-3
Archive	01-8-4
Own folders.....	01-8-5
Voice messages	01-9
Listen to voice	
messages.....	01-9-1
Voice mailbox number... ..	01-9-2
Service command editor... ..	01-10
Message settings.....	01-11
Sending profile.....	01-11-1
Message center	
number.....	01-11-1-1
Default recipient	
number.....	01-11-1-2
Reply via same	
center.....	01-11-1-3
Overwriting in outbox.. ..	01-11-2
Overwriting in inbox	01-11-3
Font size	01-11-4

2 CALL LOG



Missed calls.....	2-1
Received calls	2-2
Dialed numbers.....	2-3
Delete recent call lists	2-4
All	2-4-1
Missed	2-4-2
Received	2-4-3
Dialed.....	2-4-4
Call timers.....	2-5
Duration of last call	2-5-1
Duration of received calls ..	2-5-2
Duration of dialed calls ...	2-5-3
Duration of all calls	2-5-4
Clear timers.....	2-5-5

3 PROFILES



Normal.....	3-1
Select	3-1-1
Customize	3-1-2
Ringing options.....	3-1-2-1
Ring	3-1-2-1-1
Ascending.....	3-1-2-1-2
Ring once.....	3-1-2-1-3
Beep once.....	3-1-2-1-4
Silent	3-1-2-1-5
Ringing tone	3-1-2-2
Ringing volume	3-1-2-3
Level 1	3-1-2-3-1
Level 2	3-1-2-3-2
Level 3	3-1-2-3-3
Level 4	3-1-2-3-4
Level 5	3-1-2-3-5

Vibrating alert.....	3-1-2-4	Time settings	4-2
On.....	3-1-2-4-1	Clock.....	4-2-1
Off	3-1-2-4-2	Show/Hide clock....	4-2-1-1
Message alert tone... 3-1-2-5		Set the time	4-2-1-2
No tone	3-1-2-5-1	Time format.....	4-2-1-3
Standard.....	3-1-2-5-2	24 hour	4-2-1-3-1
Special	3-1-2-5-3	am/pm	4-2-1-3-2
Beep once	3-1-2-5-4	Auto update date/time ...	4-2-2
Ascending	3-1-2-5-5	On	4-2-2-1
Personal	3-1-2-5-6	Confirm first	4-2-2-2
Keypad tones.....	3-1-2-6	Off	4-2-2-3
Off	3-1-2-6-1	Call settings	4-3
Level 1	3-1-2-6-2	Call forwarding	4-3-1
Level 2	3-1-2-6-3	Fwd all voice calls ..	4-3-1-1
Level 3	3-1-2-6-4	Activate.....	4-3-1-1-1
Warning tones.....	3-1-2-7	Cancel	4-3-1-1-2
On.....	3-1-2-7-1	Check status	4-3-1-1-3
Off	3-1-2-7-2	Fwd if busy	4-3-1-2
Alert for	3-1-2-8	Activate	4-3-1-2-1
All calls.....	3-1-2-8-1	Cancel	4-3-1-2-2
Family.....	3-1-2-8-2	Check status	4-3-1-2-3
VIP	3-1-2-8-3	Fwd if not answered. .	4-3-1-3
Friends	3-1-2-8-4	Activate.....	4-3-1-3-1
Business.....	3-1-2-8-5	Cancel	4-3-1-3-2
Other	3-1-2-8-6	Check status	4-3-1-3-3
Timed	3-1-3	Fwd if out of reach... 4-3-1-4	
Silent.....	3-2	Activate.....	4-3-1-4-1
Meeting.....	3-3	Cancel	4-3-1-4-2
Outdoor.....	3-4	Check status	4-3-1-4-3
Pager	3-5	Fwd when not	
		able to take calls	4-3-1-5
		Activate.....	4-3-1-5-1
		Cancel	4-3-1-5-2

4 SETTINGS



Alarm clock.....	4-1
On.....	4-1-1
Off.....	4-1-2

Set delay time .. 4-3-1-5-3	Summary after call 4-3-5
5 sec 4-3-1-5-3-1	On 4-3-5-1
10 sec 4-3-1-5-3-2	Off 4-3-5-2
15 sec 4-3-1-5-3-3	Phone settings 4-4
20 sec 4-3-1-5-3-4	Language 4-4-1
25 sec 4-3-1-5-3-5	Automatic 4-4-1-1
30 sec 4-3-1-5-3-6	English 4-4-1-2
Fwd all fax calls 4-3-1-6	Français 4-4-1-3
Activate 4-3-1-6-1	Español 4-4-1-4
Cancel 4-3-1-6-2	Português 4-4-1-5
Check status 4-3-1-6-3	System selection 4-4-2
Fwd all data calls ... 4-3-1-7	Automatic 4-4-2-1
Activate 4-3-1-7-1	Manual 4-4-2-2
Cancel 4-3-1-7-2	New search 4-4-2-3
Check status 4-3-1-7-3	Touch tone length 4-4-3
Cancel all call	Short 4-4-3-1
forwarding 4-3-1-8	Long 4-4-3-2
Equalizer 4-3-2	Help text activation 4-4-4
Normal 4-3-2-1	Tone settings 4-5
Bright 4-3-2-2	Ringing options 4-5-1
Dark 4-3-2-3	Ring 4-5-1-1
Loudness 4-3-2-4	Ascending 4-5-1-2
Set 1 4-3-2-5	Ring once 4-5-1-3
Activate 4-3-2-5-1	Beep once 4-5-1-4
Edit 4-3-2-5-2	Silent 4-5-1-5
Rename 4-3-2-5-3	Ringing tone 4-5-2
Set 2 4-3-2-6	Ringing volume 4-5-3
Activate 4-3-2-6-1	Level 1 4-5-3-1
Edit 4-3-2-6-2	Level 2 4-5-3-2
Rename 4-3-2-6-3	Level 3 4-5-3-3
International prefix 4-3-3	Level 4 4-5-3-4
Automatic redial 4-3-4	Level 5 4-5-3-5
On 4-3-4-1	Vibrating alert 4-5-4
Off 4-3-4-2	On 4-5-4-1
	Off 4-5-4-2

Message alert tone	4-5-5	Automatic answer . . .	4-6-2-2
No tone	4-5-5-1	On	4-6-2-2-1
Standard	4-5-5-2	Off	4-6-2-2-2
Special	4-5-5-3	Lights	4-6-2-3
Beep once	4-5-5-4	On	4-6-2-3-1
Ascending	4-5-5-5	Off	4-6-2-3-2
Personal	4-5-5-6	Automatic	4-6-2-3-3
Keypad tones	4-5-6	Loopset	4-6-3
Off	4-5-6-1	Use loopset	4-6-3-1
Level 1	4-5-6-2	Yes	4-6-3-1-1
Level 2	4-5-6-3	No	4-6-3-1-2
Level 3	4-5-6-4	Default profile	4-6-3-2
Warning tones	4-5-7	Automatic answer . . .	4-6-3-3
On	4-5-7-1	On	4-6-3-3-1
Off	4-5-7-2	Off	4-6-3-3-2
Alert for	4-5-8	TTY/TDD	4-6-4
All calls	4-5-8-1	Use TTY	4-6-4-1
Family	4-5-8-2	Yes	4-6-4-1-1
VIP	4-5-8-3	No	4-6-4-1-2
Friends	4-5-8-4	Security settings	4-7
Business	4-5-8-5	PIN code request	4-7-1
Other	4-5-8-6	Fixed dialing	4-7-2
Accessory settings	4-6	On	4-7-2-1
Headset	4-6-1	Off	4-7-2-2
Default profile	4-6-1-1	Number list	4-7-2-3
Current profile	4-6-1-1-1	Security level	4-7-3
Normal	4-6-1-1-2	Off	4-7-3-1
Silent	4-6-1-1-3	Memory	4-7-3-2
Meeting	4-6-1-1-4	Phone	4-7-3-3
Outdoor	4-6-1-1-5	Access codes	4-7-4
Pager	4-6-1-1-6	Change security	
Automatic answer	4-6-1-2	code	4-7-4-1
On	4-6-1-2-1	Change PIN code . . .	4-7-4-2
Off	4-6-1-2-2	Change PIN2 code . .	4-7-4-3
Handsfree	4-6-2	Restore factory settings	4-8
Default profile	4-6-2-1		

5 VOICE



Voice recorder	5-1
Record	5-1-1
Recordings list	5-1-2
Voice commands	5-2
Profiles	5-2-1
Voice mailbox	5-2-2
Infrared	5-2-3
Recorder	5-2-4

6 ORGANIZER



Calendar	6-1
To-do list	6-2
Wallet	6-3

7 CALCULATOR



8 GAMES



Select game	8-1
Snake II	8-1-1
Pass 'n Rush	8-1-2
Bumper	8-1-3
Pairs II	8-1-4

Settings	8-2
----------------	-----

Game sounds	8-2-1
-------------------	-------

On	8-2-1-1
----------	---------

Off	8-2-1-2
-----------	---------

Game lights	8-2-2
-------------------	-------

On	8-2-2-1
----------	---------

Off	8-2-2-2
-----------	---------

Shakes	8-2-3
--------------	-------

On	8-2-3-1
----------	---------

Off	8-2-3-2
-----------	---------

9 INFRARED



Infrared	9
----------------	---

10 SERVICES




5 Your phone's keypad

• ENTER CHARACTERS AND NUMBERS



Note: The following focuses on entering text into messages, but applies to any screen that accepts keypad entry, such as web addresses or names in the Phone book.

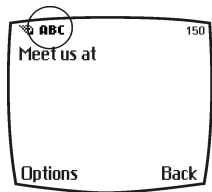

- 1 At the **Start** screen, press **Menu 01-1** (**Messages > Write message**). The message entry screen opens in text entry mode.
- 2 To enter numbers, press and hold  until the **Abc** icon in the upper left corner of the display changes from **ABC** to **123**.



Note: There are three types of text entry modes:


- **ABC** - Any text you enter is capital letters
- **Abc** - The first letter of each sentence is capitalized
- **abc** - Any text you enter is lower case

Enter text

- Press any key once to insert the first letter on the key, twice for the second letter, and so on. When you pause, the letter appearing in the display is accepted and your phone awaits the next entry.
- Press  to accept a word and enter a space
- Press  to enter a period (.)
- Press  to display special characters. More about special characters on the following pages
- Press **Clear** to backspace and erase a character
- Press and hold **Clear** to backspace continuously, and erase
- Use predictive text to write messages faster. See "Use predictive text" on page 77 for more information

Use special characters

While entering text, press (or *press and hold*, if predictive text is on)  to display special characters. Press  again to cycle through all available characters.

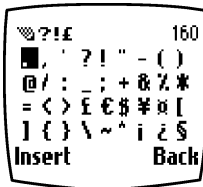


Available special characters

.	,	'	?	!	"	-	(	)	@	/
:	_	;	+	&	%	*	=	<	>	£
€	\$	¥	¤	[	]	{	}	\	~	^
¡	¿	§	#	¡	⌵	⬅				

Use four-way scrolling

Navigate special characters using the 2, 4, 6, and 8 keys much as you would a joystick. Once a character is highlighted press  to insert the character into your message.

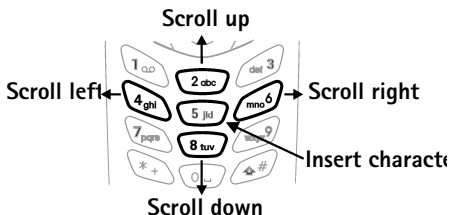

SWITCH BETWEEN ABC AND 123 MODES

Press and hold  until the icon in the upper left corner of the display switches from **Abc** to **123** (or from **123** to **Abc**).

SWITCH BETWEEN UPPERCASE AND LOWERCASE TEXT

Press  to alternate between upper case (ABC), lower case (abc), and sentence case (Abc) while in text mode.

6 The Phone book

One of the most useful features in the Nokia 6340i is its powerful Phone book. You can store up to 500 names and their associated web, e-mail, and street addresses within the Phone book. Each name, or entry as it is called, has room for multiple numbers and text entries.



Note: This feature utilizes dynamic memory. See "Dynamic memory use" on page 7 for more information.

• OPEN THE PHONE BOOK

- 1 At the **Start** screen, press **Names**. The submenus in the following table appear in the display.
- 2 Use the scroll keys ( ) to highlight an option. Press **Select** () to activate an option or enter its submenu.

Phone book menu

Find	Search for a name in your Phone book or list the names and select from the list
Add entry	Add a new entry (name and number) to your Phone book
Edit name	Edit an existing name in your Phone book
Add number	Add a number to an existing entry in your Phone book
Delete	Delete names and numbers in your Phone book one by one or all at once
Copy	Copy entries from SIM card to Phone or vice versa. You have the option to copy entries one by one or all at once
Settings	Change how you view the Phone book, check your memory status, and select which memory to use

Phone book menu

1-touch dialing	Show a list of 1-touch dialing numbers, if you have assigned any to keys 2-9
Voice tags	Show a list of voice dialing numbers, if you have assigned voice tags to any Phone book entries
Service nos.	List the fax, data, and voice numbers saved to your SIM card by your wireless provider
Own numbers	Display the phone number assigned to your phone, if the number is saved to the SIM card by your wireless provider
Caller groups	Set up a caller group. You can define ringing tones and graphics for up to five groups in your Phone book. See "Caller groups" on page 36 to set up a caller group

Add an entry to the Phone book

- 1 At the **Start** screen press **Names**, scroll to **Add entry**, and press **Select**.
- 2 Enter a name for the entry and press **OK**.
- 3 Enter the area code and number for the entry and press **OK**.
The name and number are saved to the memory in use.

OR

- 1 At the **Start** screen, enter the area code and number you wish to save and press **Options**.



Tip: Always save numbers with a + in front to simplify international dialing. See "International dialing" on page 59 for more information.

- 2 Ensure **Save** is highlighted and press **Select**.
- 3 Enter a name for the number and press **OK**. The name and number are saved to the memory in use.

Number types

Phone numbers are sub-entries of an entry, or a name. Each entry can hold multiple numbers, and you can assign a different "type" to each. Once assigned, a number type is easily identified by the icon to the left of the number. The following number types are available:

 **General**  **Mobile**  **Home**  **Work**  **Fax**



Important: If you plan on using Nokia PC Sync to synchronize your Phone book and your PC's PIM (Personal Information Manager) application, make sure all phone numbers are assigned the correct number type. PC Sync uses this information to synchronize contacts correctly between phone and PC.

ASSIGN OR CHANGE A NUMBER TYPE



Note: This function is not available for numbers stored only on your SIM card.

- 1 At the **Start** screen, press one of the scroll keys ( ) to display your Phone book entries.
- 2 Scroll to the entry containing the numbers you wish to change and press **Details**.
- 3 Use the scroll keys to highlight the number you wish to change and press **Options**.
- 4 Scroll to **Change type** and press **Select**.
- 5 Scroll to the number type of your preference and press **Select**.
A confirmation message appears in the display.

Add an address or note to a Phone book entry



Note: This function is not available for numbers stored only on your SIM card.

- 1 With an entry in your Phone book highlighted, press **Details**.
- 2 Press **Options**, scroll to **Add detail**, and press **Select**.
- 3 Scroll to **E-mail**, **Web address**, **Street addr.**, or **Note** and press **Select**.

- 4 Enter text with the keypad and press **OK**.
 - Press **Clear** to backspace and delete text
 - Press and hold **Clear** to backspace continuously and delete text
 - Press  to switch between letter case (**ABC**, **Abc**, or **abc**)
 - Press and hold  to switch between text and numbers
 - Press  to display special characters (such as **@**, **#**, and more)

Save a number (only)

- 1 At the **Start** screen, enter the area code and number you would like to save.
- 2 Press and hold **Options**. The number is saved to your Phone book as a stand-alone entry.

Display Phone book entries quickly


Display any entries in your Phone book with the press of a key. Just press one of the scroll keys ( ) at the **Start** screen.



Tip: Any entries which display the SIM card icon () in the upper right corner of the display indicate that entry is saved to the SIM card.



Note: Any entries which appear twice in the display (as in this illustration), indicate the entry is saved to both phone memory and SIM memory.

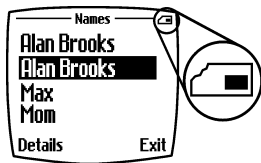

Search the Phone book quickly

- 1 At the **Start** screen, press one of the scroll keys ( ) to display any entries in your Phone book.
- 2 Press the key which contains the first letter of the entry you are searching (example; press  twice to search for "Evelyn").

Any entries that begin with "E" appear in the display, as well as a search box with the magnifying glass icon ()

- 3 Continue entering letters to locate the entry, or move through and highlight other entries using the scroll keys.
- 4 Once you have highlighted the desired entry, press  to dial the number. Or, press **Details**, then press **Options** to display the options listed in the following table.
- 5 Scroll to an option. Press **Select** to activate an option or to enter its submenu.

Options while displaying a Phone book entry

Add voice tag	Add a voice tag to the highlighted entry
Edit number	Edit the highlighted number
Delete number	Delete the highlighted number
View	View the highlighted number
*Change type	Change the number to one of the 5 available types: General , Mobile , Home , Work , or Fax *Only works with numbers stored in phone memory
*As primary no.	Assign the number as your primary number. See "Assign a primary number" on page 35 for more information. *Only works with numbers stored in phone memory
Add number	Add another number to the selected entry
Add detail	Add an e-mail address, web address, street address, or note to the selected entry
Caller groups	Add the selected entry to one of the 5 available caller groups, or select No group
Send bus. card	Send a business card containing the selected entry's information to a compatible phone via IR or SMS

Options while displaying a Phone book entry

Send message	Send a message to the entry via SMS or e-mail
1-touch dialing	Assign the number to a 1-touch dialing location
Edit name	Edit the name of the entry
View name	View the name of the entry
Copy number	Copy the entry to another memory location
Delete	Delete the entry and all information it contains

Edit names

- 1 At the **Start** screen, press **Names** and scroll to **Edit name**.
- 2 Press **Select** and scroll to the name you wish to change.
- 3 Press **Edit**, modify the name as desired, and press **OK** once you have finished.
 - Press **Clear** to backspace and delete text
 - Press and hold **Clear** to backspace continuously (and delete)

Delete names and numbers

You can delete single entries in your Phone book or all entries at once.

DELETE A SINGLE ENTRY

- 1 At the **Start** screen, press **Names**, scroll to **Delete**, and press **Select**.
- 2 Ensure **One by one** is highlighted and press **Select**.
- 3 Scroll to the entry you wish to delete and press **Delete**.
- 4 Press **OK** again to confirm the deletion, or **Back** to select another.

DELETE ALL NAMES AND NUMBERS

- 1 At the **Start** screen, press **Names**, scroll to **Delete** and press **Select**.

- 2 Ensure **Delete all** is highlighted and press **Select**.
- 3 Scroll to **Phone** or **SIM card** and press **Delete**.
- 4 Press **OK** to confirm or **Back** to select from **Phone** or **SIM card** again.
If you pressed OK, you are prompted to enter the security code (default is **12345**).
- 5 Enter the security code and press **OK** to delete or **Back** to select from **Phone** or **SIM card** again.



Important: If you enter the wrong security code 3 times in a row, the phone is blocked and will not accept a code for 5 minutes.

Assign a primary number

For names containing more than one number, assign the most-dialed number as the *primary number*. The primary number is the number dialed when you select a name for dialing that contains multiple numbers.

- 1 At the **Start** screen, press  or  to display a list of Phone book entries.
- 2 Scroll to a name containing multiple numbers and press **Details**.
- 3 Scroll to the number you would like to assign as the primary number (or change to the primary number) and press **Options**.
- 4 Scroll to **As primary no.** and press **Select**. The primary number is set.

• CUSTOMIZE THE PHONE BOOK

Change the Phone book view

You can view the contents of your Phone book as a list or view each entry as a full display (larger text).

- 1 At the **Start** screen, press **Names**, scroll to **Settings**, and press **Select**.
- 2 Scroll until **Phone book view** appears in the display and press **Select**.
- 3 Scroll to **Name list** or **Name+number** and press **Select**.

Caller groups

You can add Phone book entries to one of 5 caller groups, and then assign a unique ringing tone or graphic to that group. This enables you to identify callers from that caller group by their unique ringing tone or graphic. A caller group can be as small as one person or as large as your entire Phone book. Caller groups can be renamed to suit your preference.

CALLER GROUP OPTIONS

- 1 At the **Start** screen, press **Names**, scroll to **Caller groups**, and press **Select**. The following Caller groups are available.
 - **Family** • **VIP** • **Friends** • **Business** • **Other**
- 2 Use the scroll keys ( ) to highlight a group. Press **Select** to display the following caller group options:

Rename group	Rename the group to your preference
Group ringing tone	Set the ringing tone for the group
Group logo	Turn the graphic for the caller group on or off
Group members	Add or remove members from the caller group

Set up a caller group

- 1 At the **Start** screen, press  or  to display a list of entries in your Phone book.



Tip: Perform a “quick find” when Phone book entries are displayed by entering the first letter of a name.  appears in the bottom of the display to indicate you are performing a search.

- 2 Scroll to a name you would like to add to a caller group and press **Details**.
- 3 Press **Options**, scroll to **Caller groups**, and press **Select**.
- 4 Scroll to the caller group to which you would like to add the name and press **Select**. A confirmation message appears in the display.

• YOUR PHONE'S MEMORY

Your phone has three options for the use of its memory; **Phone**, **SIM**, and **Phone and SIM** combined. Only names and numbers saved to the memory in use will appear in the display.



Note: With **Phone and SIM** memory selected, entries saved to both memories appear in the display. Therefore, you may see the same entry twice when you view the contents of your Phone book.

Memory specific information

Feature	Phone	SIM	Phone and SIM
*Name capacity	Up to 500 names	Up to 250 names (varies with SIM card)	Up to 750 names (both SIM and phone entries are displayed)
*Number capacity	Multiple numbers per name	One per name	Multiple numbers per name (stored in phone memory)
Can use Voice dialing?	Yes	Yes	Yes
Can transfer names/numbers to another phone?	Via IR or PC Suite	Via IR, PC Suite, and SIM	Via IR, PC Suite, and SIM
*Can store text information such as street address, e-mail address, note?	Multiple text entries per name	No	Multiple text entries per name (stored in phone memory)



Note: This feature utilizes dynamic memory. See "Dynamic memory use" on page 7 for more information.

View memory in use

You can view the memory available in your Phone or SIM card by doing the following:

- 1 At the **Start** screen, press **Names** and scroll to **Settings**.
- 2 Press **Select** and scroll until **Memory status** appears in the display.
- 3 Press **Select**, scroll to **Phone** or **SIM card**, and press **Select** again.

Depending on which memory you have selected, either a graphic or numeric representation of memory usage appears in the display.

Select a memory

- 1 At the **Start** screen, press **Names**, scroll to **Settings**, and press **Select**.
- 2 Scroll until **Memory in use** appears in the display and press **Select**.

The following options are available:

Phone and SIM	Data is saved to Phone memory, but SIM <i>and</i> Phone entries appear in the display.
Phone	Data is saved to Phone memory. Only entries saved to Phone memory appear in the display.
SIM card	Data is saved to the SIM card. Only entries saved to the SIM card appear in the display.

- 3 Scroll to the memory option of your choice and press **Select**.



Tip: If you wish to save multiple numbers to a name, or information such as an e-mail or street address, choose **Phone** or **Phone and SIM**.

• COPY PHONE BOOK ENTRIES

- 1 At the **Start** screen, press **Names**, scroll to **Copy**, and press **Select**.
- 2 Scroll to **From phone to SIM card** or **From SIM card to phone** and press **Select**. The following options appear in the display:

One by one	Select and copy entries one by one
All	Copies all entries from the SIM card or Phone
*Primary nos.	Copies only primary numbers. This appears only if you select From phone to SIM .

- 3 Scroll to the copy method of your choice and press **Select**.
 - a) If you selected **One by one**, go to step 4.
 - b) If you selected **All** or **Primary nos.**, go to step 6.
- 4 Scroll to the entry you wish to copy and press **Copy**.
- 5 Scroll to **Keep original** or **Move original** and press **Select**. The entry is copied and you are returned to the list of Phone book entries.
- 6 If you selected **All** or **Primary nos.** in step 3, scroll to **Keep original** or **Move original** and press **Select**.
- 7 Press **OK** to confirm your choice. All entries are copied to the selected destination. Press **Back** to return to the list of Phone book entries, or press  to exit and return to the **Start** screen.



Caution: Select **Keep original** if you are unsure of which copy method to use. This ensures original entries are merely copied to the new location. **Move original** deletes files after copying.

• VIEW SERVICE NUMBERS

Your wireless provider may have saved service numbers to your SIM card. To view these numbers:

- 1 At the **Start** screen, press **Names**, Scroll to **Service nos.** and press **Select**. A list of numbers, if available, appears in the display.
- 2 To view details of a number, scroll to the number and press **Details**.



Note: This feature may not be supported by your SIM card. If so, contact your wireless provider if you wish to have it enabled.

7 Call log

Call log stores information about the last 20 missed, received, or dialed calls. It also adds the total duration of all calls. When the number of calls exceed 20, the most recent call replaces the oldest. For Call log to work properly:

- Your wireless provider must support caller ID, and it must be enabled
- Your calls cannot be blocked
- Your phone must be on and within the service area

• CALL LOG OPTIONS

Whether you are viewing missed, received, or dialed calls, each of the menu options will be the same. Please refer to the following table regarding menu options for these features.

Missed, received, and dialed call options

Call time	Display the date and time of the call
Send message	Send a message to the number
View number	Display the number
Edit number	Edit the number and associate a name with the number
Save	Enter a name for the number and save it to your Phone book
Add to name	Add the number to an existing entry in your Phone book, if the number is not associated with a name
Delete	Delete the number from memory
Call	Call the number

View missed calls

Missed calls are calls that were never answered. You can check for missed calls two ways:

- 1 If **# missed call** appears in the display, press **List**. The phone number appears in the display.
- 2 Press **Options** to display the options listed in the table on page 40.
- 3 Scroll to an option, press **Select** to activate the option or to enter its submenu.

OR

- 1 At the **Start** screen, press **Menu 2-1 (Call log > Missed calls)**.
After a brief pause, a list of missed calls appear in the display (if any exist).
- 2 Scroll to a number and press **Options** to display the options listed in the table on page 40.
- 3 Scroll to an option, press **Select** to activate the option or to enter its submenu.

View received calls

Received calls are calls that have been answered.

- 1 At the **Start** screen, press **Menu 2-2 (Call log > Received calls)**.
After a brief pause, a list of received calls appears in the display (if any exist).
- 2 Scroll to a number and press **Options** to display the options listed in the table on page 40.
- 3 Scroll to an option, press **Select** to activate the option or enter its submenu.

View dialed numbers

You can view dialed numbers one of two ways:

- 1 At the **Start** screen, press . Your most recently dialed numbers appear in the display.

OR

- 2 At the **Start** screen, press **Menu 2-3 (Call log > Dialed numbers)**.
After a brief pause, your most recently dialed numbers appear in the display.
- 3 Scroll to a number and press **Options** to display the options listed in the table on page 40.
- 4 Scroll to an option, press **Select** to activate the option or enter its submenu.

Call times

You can receive up to five calls from the same number, and view the time each call occurred. Your clock must be set for this feature to work accurately. See "Set the time and date" on page 102 for instructions on setting your clock.

- 1 While viewing a missed or received call, press **Options**, scroll to **Call time**, and press **Select**.
- 2 The time that the last call occurred appears in the display.
- 3 Press  to view other call times from this number. Press **Back** to return to the options list.

Delete recent call lists

To clear any missed, received, or dialed calls from your phone's memory:

- 1 At the **Start** screen, press **Menu 2-4 (Call log > Delete recent call lists)**.
After a brief pause, **All**, **Missed**, **Received** and **Dialed** appear in the display.
- 2 Scroll to the call type you would like to clear and press **Select**.

View call duration

- 1 **Duration of last call.** At the **Start** screen, press **Menu 2-5-1 (Call log > Call timers > Duration of last call)**. The duration of your last call appears in the display.

- 2 **Duration of received calls.** At the **Start** screen, press **Menu 2-5-2** (**Call log > Call timers > Duration of received calls**). The duration of all received calls appears in the display.
- 3 **Duration of dialed calls.** At the **Start** screen, press **Menu 2-5-3** (**Call log > Call timers > Duration of dialed calls**). The duration of all dialed calls appears in the display.
- 4 **Duration of all calls.** At the **Start** screen, press **Menu 2-5-4** (**Call log > Call timers > Duration of all calls**). The duration of all calls (missed, received and dialed) appears in the display.

Activate/deactivate summary after call

To show (or not show) the duration of each call after you hang up:

- 1 At the **Start** screen, press **Menu 4-3-5** (**Settings > Call settings > Summary after call**).

After a brief pause, **On** and **Off** appear in the display.

- 2 Scroll to **On** or **Off** and press **Select**.

Clear call timers

- 1 At the **Start** screen, press **Menu 2-5-5** (**Call log > Call timers > Clear timers**).

After a brief pause, you are prompted to enter the security code.
The default is 12345.

- 2 Enter the security code and press **OK**. A note confirming the timers have been cleared appears in the display.



Important: Clear timers resets the duration timers for all call types and is irreversible.

8 Use voicemail

If you subscribe to voicemail, your wireless provider will furnish you with a voice mailbox number. You need to save this number to your phone to use voicemail. When you receive a voice message, your phone lets you know by beeping, displaying a message, or both. If you receive more than one message, your phone shows the number of messages received.

• SAVE YOUR VOICE MAILBOX NUMBER

Your wireless provider may have already saved your voice mailbox number to your phone. If so, the number will appear in the display in step 2. Press **OK** to leave the number unchanged.

- 1 At the **Start** screen, press **Menu 01-9-2 (Messages > Voice messages > Voice mailbox number)**.
- 2 After a brief pause, the mailbox number screen appears in the display.
- 3 If the box is empty, enter the voice mailbox area code and number.
- 4 Press **OK**. Your phone confirms the number has been saved.



Tip: Save yourself the trouble of entering the mailbox codes each time you dial voicemail. See "Automate voicemail" later in this section for more information.

• CALL AND SET UP YOUR VOICEMAIL

- 1 Once you have saved the voice mailbox number, press and hold .
- 2 Once you connect and the pre-recorded greeting begins, follow the automated instructions to setup your voicemail.

Listen to your voice messages

Once you have set up voicemail, you can dial the number one of 4 ways:

- Dial the number using the keypad
- Press and hold .

- Press **Listen** if there is a notification message in the display
- Press **Menu 01-9-1 (Messages > Voice messages > Listen to voice messages)**. After a brief pause, your phone dials the voicemail number.

Once you connect and the pre-recorded greeting begins, follow the automated instructions to listen to your voice messages.

• AUTOMATE VOICEMAIL

You can insert special characters called “dialing codes” into phone numbers such as voicemail and then save the number to a 1-touch dialing location. Dialing codes instruct the receiving system to pause, wait, bypass, or accept the numbers that follow them in the dialing string.



Note: Each voicemail service can vary. The examples and steps that follow are for clarification. Check with your wireless provider if you have specific questions about your voicemail service.

Write down some information

- 1 Write down your voice mailbox number.
- 2 Call and check your voicemail as you normally would.
- 3 Write down your interaction with the recorded prompts step-by-step. Keep in mind that each voicemail service may vary. However, it should look something like this:

Dial 2145551212, pause 5 seconds, press , pause 2 seconds, enter 1234, press .



Important: Be precise, you will need this information in “Set up voicemail with dialing codes” on page 46.

LEARN HOW TO INSERT DIALING CODES

Press  repeatedly to cycle through dialing codes. Once the desired code appears, pause briefly to insert the code into your dialing string.

For example, press  four times to display "w" (wait character). Pause briefly to insert the wait character into your dialing string. Available dialing codes are as follows:

Dialing codes

*	Bypasses a set of instructions
+	Precedes an international telephone number
p	Pauses for 2.5 seconds before sending any numbers that follow
w	Wait. Your phone waits for you to press  before it sends any numbers or codes that follow.

Set up voicemail with dialing codes

- 1 At the **Start** screen, press **Names**, scroll to **1-touch dialing**, and press **Select**.
- 2 Scroll to an empty 1-touch dialing slot and press **Assign**.
- 3 Enter your voice mailbox number, including the area code.
- 4 Refer to the table entitled "dialing codes," and enter any codes as necessary using the information that you wrote down earlier.

For example, if you pause for 5 seconds after connecting to voicemail, enter **p** twice *after* the voice mailbox number, such as 2145551212**pp**.

- 5 Enter any remaining pauses, PIN codes, and other information that allows you to listen to your messages, then press **OK**.
- 6 Enter a name (such as Voicemail) and press **OK**. A message appears in the display confirming your 1-touch dialing location has been saved.

Now, to dial and listen to your voicemail, just press and hold the assigned 1-touch dialing key at the **Start** screen. No other keypresses should be necessary.

9 Advanced features

• IN-CALL OPTIONS

You have numerous options while in a call. The options listed on the following pages are those available in the most common situations, such as when you are in a call or when a call is on hold.



Note: Some options are network dependent. Check with your wireless provider if you have questions regarding availability.

- 1 Press **Options** while performing any of the following in-call activities.
- 2 Use your scroll keys to highlight an option.
- 3 Press **Select** to activate an option or enter the option's submenu.

With one call active

Record	Record the current phone conversation
Equalizer	Select an equalizer set or create a custom set of your own
End call	Terminate the call
New call	Place a new call
Touch tones	Enter touch tones manually or recall a string from your Phone book
Phone book	Display the Phone book menu
Menu	Return to the main menus
Mute	Mute the current call. You can hear the other person but they cannot hear you
Hold	Place the current call on hold

With a call on hold **(See Note regarding in-call options)*

Record	Record the current phone conversation
Equalizer	Select an equalizer set or create a custom set of your own
End call	Terminate the call
New call	Place a new call
Phone book	Display the Phone book menu
Menu	Return to the main menus
Mute	Mute the current call. You can hear the other person but they cannot hear you
Unhold	Activates the held call

With one call active and another on hold

**(See Note regarding in-call options)*

Record	Record the active phone conversation
Equalizer	Select an equalizer set or create a custom set of your own
End call	Terminate the active call
End all calls	End all calls
Conference	Connect all parties in a conversation
Touch tones	Enter touch tones manually or recall a string from your Phone book
Phone book	Display the Phone book menu
Menu	Return to the main menus

With one call active and another on hold

**(See Note regarding in-call options)*


Mute	Mute the current call. You can hear the other person but they cannot hear you
Swap	Switch form the active call to the one on hold.
Transfer calls	Transfer your calls (on hold or otherwise) to another number

• CALL WAITING

If supported by your wireless provider, call waiting notifies you of an incoming call while you are in a call. You can then accept, reject, or ignore the incoming call.

When you receive an incoming call

- 1 At first, the name or number appears in the display. After a few seconds,  **Call 2** appears below  **Call 1** in the display.
- 2 Press **Answer** or  to pick up the call. The first caller is put on hold and **Swapped** appears in the display.
- 3 If you do not pick up the call within 30 seconds, the call is dropped.

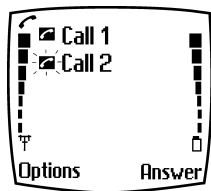

Switch between calls

- Press **Swap** or 

End the active call

- Press 

End both calls

- Press **Options**, scroll to **End all calls**, and press **OK**

Reject a waiting call

- Press **Options**, scroll to **Decline call** and press **Select**

Place a new call with one on hold

- While in a call, enter the number for the second call and press . The first caller is put on hold.
- Switch between the two calls by pressing **Swap** or .
- End the active call by pressing .
- To end both calls, press **Options**, scroll to **End all calls**, and press **Select**

• SEND OWN CALLER ID WITH NEXT CALL

You can prevent your number from being displayed on the receiving party's caller ID. This feature is network dependent and works on a call-by-call basis. Contact your wireless provider for more information.

• CALL FORWARDING

Call forwarding tells your network to redirect incoming calls to another number.



Important: Call forwarding is network-dependent and may not work the same in all networks. Contact your wireless provider for availability.

Activate call forwarding

- 1 At the **Start** screen, press **Menu 4-3-1** (**Settings > Call settings > Call forwarding**).

- 2 After a brief pause, the forwarding options listed in the following table appear in the display.

Forward all voice calls	Forward all calls to the number you specify
Forward if busy	Forward incoming calls when you are in a call
Forward if not answered	Forward incoming calls to another number if you are unable to answer. You can also set a delay before forwarding takes place
Forward if out of reach	Forward incoming calls when your phone is off reach
Forward when not able to take calls	Forward calls that are not picked up. You can also set a delay before forwarding takes place
Forward all fax calls	Forward all fax calls to a fax mailbox
Forward all data calls	Forward all data calls to a data mailbox
Cancel all call forwarding	Cancel any call forwarding options you may have set

- 3 Scroll to the option of your choice and press **Select**.
- 4 Scroll to **Activate** and press **Select**.
- 5 Scroll to the destination to which your calls will be forwarded (such as **To other no.**) and press **Select**.
- 6 Enter the number to which your calls, data, or other information will be forwarded and press **OK**.

Your phone calls the network to activate the feature you have requested. The network sends a confirmation note when the feature has been activated successfully.

Cancel call forwarding

- At the **Start** screen, press **Menu 4-3-1-8** (**Settings > Call settings > Call forwarding > Cancel all call forwarding**).



Note: Cancel all call forwarding may affect your ability to receive voice mail messages. Contact your wireless provider for specific details.

Automatic redial

Occasionally, your network may experience heavy traffic, resulting in a "fast" busy signal when you dial. With automatic redial activated, your phone redials the number up to 10 times, and notifies you once the network becomes available.

ACTIVATE OR DEACTIVATE AUTOMATIC REDIAL

- 1 At the **Start** screen, press **Menu 4-3-4** (**Settings > Call settings > Automatic redial**).
- 2 After a brief pause, **On** and **Off** appear in the display. Scroll to your choice and press **Select**.

• VOICE DIAL

You can select up to 10 entries in your Phone book to dial by voice. Before you can do this, you will need to assign each entry a "voice tag."

Notes about voice tags

- Voice tags can be no longer than 1.5 seconds
- You cannot use voice dial while in a call
- Press **Quit** to abort recording the voice tag
- Choose a quiet location for recording voice tags
- Unique tags are best. For example, "John Smith, work"
- Avoid pauses or silence as you record the voice tag
- If memory is full, **Delete an existing voice tag?** appears in the display. Press **OK**, scroll to locate a tag to delete, and then press **Delete**



Important: *Do not* use voice tags to dial in emergencies. Stress can cause changes in your voice and prevent the phone from recognizing your commands!

Assign a voice tag

- 1 At the **Start** screen, press either scroll key ( ) to display the entries in your Phone book.
- 2 Scroll to the entry you would like to assign a voice tag, and press **Details**.
- 3 If the entry has multiple numbers, scroll to the number you wish to tag and press **Options**.
- 4 Scroll to **Add voice tag**, press **Select**, and then press **Start**.
- 5 After the phone beeps, pronounce the voice tag clearly into the microphone.
 - If the recording is successful, the voice tag is replayed through the earpiece and a confirmation note appears in the display.
 - If the recording fails, the phone asks if you want to try again. Press **OK** to try again or **Back** to exit.

Voice dial a number

- 1 At the **Start** screen, press and hold **Names**. The phone beeps and **Please speak now** appears in the display.
- 2 Within 3 seconds, pronounce the tag into the microphone.

Once the voice tag is recognized, the tagged entry appears in the display, replays through the earpiece, and the number is dialed.

VOICE DIAL WITH THE HEADSET

After you have assigned voice tags to those entries you wish to dial, you can also voice dial a number using the optional HDC-9P headset.

- 1 At the **Start** screen, press and hold the remote button on the headset. Your phone beeps and **Please speak now** appears in the display.
- 2 Pronounce the voice tag into the microphone.

Once the voice tag is recognized, the tagged entry appears in the display, replays through the earpiece, and the number is dialed.

Display voice tagged entries

- 1 At the **Start** screen, press **Names**.
- 2 Scroll to **Voice tags** and press **Select**. In alphabetical order, the first voice tagged name and number appear in the display.
- 3 Press the scroll keys ( ) to view other voice tagged entries.

Change or delete a voice tag

- 1 At the **Start** screen, press **Names**, scroll to **Voice tags**, and press **Select**.
The first voice tagged entry in your Phone book appears in the display.
Entries appear in alphabetical order.
- 2 Scroll until the voice tag you wish to change or delete appears in the display, then press **Options**.
- 3 Scroll to **Change** or **Delete** and press **Select**.

• VOICE COMMANDS

You can command your phone to perform up to 5 different functions with your voice. Voice commands work similar to voice dialing, so you will need to associate a voice tag with each command.



Note: Voice commands cannot be used during a call, or when the data cable is attached.

Add a voice tag for a command

- 1 At the **Start** screen, press **Menu 5-2 (Voice > Voice commands)**.
After a brief pause, the options listed in the following table appear in the display.



Note: You can select more than 1 profile to command by voice.

Profiles	Activate up to 5 profiles
Voice mailbox	Dial your voice mailbox
Infrared	Activate infrared
Recorder	Record a voice memo

- 2 Scroll to the command you wish to tag and press **Select**.
- 3 Press **Options**. **Add command** is highlighted, press **Select**.
- 4 Press **Start**, and when the phone beeps, pronounce the voice tag into the microphone. The phone replays and saves the tag.



Note: Do not press **Quit** unless you want to cancel the recording.

Execute a voice command

After you have associated a voice tag with a command, execute the command as follows:

- 1 Press and hold **Names**. **Please speak now** appears in the display.
- 2 Pronounce the tag for one of the 5 available commands. **Found:** **<command>** appears in the display and the command is executed.

EXECUTE VOICE COMMANDS WITH THE HEADSET

After you have associated a voice tag with a command, you can also execute voice commands using the optional HDC-9P headset.

- 1 At the **Start** screen, press and hold the remote button on the headset. The phone beeps and **Please speak now** appears in the display.
- 2 Pronounce the tag for one of the 5 available commands. **Found:** **<command>** appears in the display and the command is performed.



Tip: You can also execute voice commands by pressing and holding the *down* volume key on the side of the phone.

Change or delete an existing voice command tag

- 1 At the **Start** screen, press **Menu 5-2 (Voice > Voice commands)**.
- 2 After a brief pause, the list of voice commands appear in the display.
- 3 Scroll to the voice command you wish to modify and press **Select**.
- 4 When the command you wish to modify appears in the display, press **Options**.

- 5 Scroll to **Change** or **Delete** and press **Select**.
 - If you selected **Change**, press **Start**, then record the new tag.
 - If you selected **Delete**, press **OK** and the tag for the selected command is deleted.

• VOICE RECORDER

The Nokia 6340i phone can record both voice memos and phone conversations. The total of all recordings stored in your phone cannot exceed 3 minutes. If you are running out of memory and try to record, you are asked to erase a recording before proceeding.

Record a memo

- 1 At the **Start** screen, press **Menu 5-1-1 (Voice > Voice recorder > record)**.
- 2 After a brief pause, your phone begins recording and a progress bar appears in the display to indicate recorded time versus time left.
- 3 After you are finished recording, press **Stop**, enter a title for the recording, and press **OK**.

View recorded memos

- At the **Start** screen, press **Menu 5-1-2 (Voice > Voice recorder > Recordings list)**.

After a brief pause, your oldest recorded memo appears in the display.

Play back a memo

- 1 At the **Start** screen, press **Menu 5-1-2 (Voice > Voice recorder > Recordings list)**.
- 2 After a brief pause, your oldest recorded memo appears in the display.
- 3 Scroll until the memo you wish to play appears in the display and press **Options**.
- 4 Scroll to **Playback** and press **Select**.

The memo begins playing, and a progress bar appears in the display indicating the amount of play time left. If necessary, adjust the volume using the side volume key.

PLAY BACK A MEMO WHILE IN A CALL

You can play back a memo while in a call. All participants in the call can then hear the memo as it is played back.

- 1 While in a call, press **Options**, scroll to **Menu**, and press **Select**.
- 2 Scroll until **Voice** (menu) appears in the display and press **Select**.
Voice recorder appears in the display.
- 3 Press **Select**, scroll to **Recordings list** and press **Select** again.
- 4 Scroll until the memo you wish to playback appears in the display and press **Options**.
- 5 Scroll to **Playback** and press **Select** to play the memo.

Delete a memo

- 1 At the **Start** screen, press **Menu 5-1-2 (Voice > Voice recorder > Recordings list)**.
- 2 After a brief pause, your oldest recorded memo appears in the display.
- 3 Scroll until the memo you would like to delete appears in the display and press **Options**.
- 4 Scroll to **Delete** and press **Select**. You are asked to confirm the deletion.
- 5 Press **OK** and the memo is deleted.

Record a phone conversation

- 1 While in a call, press **Options**, scroll to **Record**, and press **Select**.
- 2 Your phone begins recording the conversation. A progress bar and timer appear in the display, indicating the amount of time left. Also, a beep sounds every 5 seconds to notify both parties the conversation is being recorded.

- 3 Press **Stop** to abort the recording. The recording is saved as the time and date.



Note: It may be illegal in some jurisdictions to record a phone conversation without the permission of all participants.

• 1-TOUCH DIALING

You can associate any entry in your Phone book with keys 2 through 9, and then dial those entries by pressing and holding the assigned key.

Assign a key to 1-touch dialing

- 1 At the **Start** screen, press **Names**, scroll to **1-touch dialing** and press **Select**.
- 2 Scroll to any empty slot and press **Assign**.
- 3 Enter the number (including the area code) and press **OK**, or press **Find** to retrieve a number from your Phone book.
- 4 Enter a name for the number and press **OK**.

Make a call with 1-touch dialing

- Press and hold the key to which an entry has been assigned, or press the key to which an entry is assigned and press .

Your phone dials the entry assigned to the key.

CHANGE 1-TOUCH DIALING NUMBERS

- 1 At the **Start** screen, press **Names**, scroll to **1-touch dialing** and press **Select**.
- 2 Scroll to the 1-touch dialing location you wish to change and press **Options**.
- 3 Scroll to **Change** and press **Select**.
- 4 Enter the new number, or press **Find** to retrieve a number from your Phone book, and press **OK**.
- 5 Enter a name for the entry and press **OK**.

DELETE 1-TOUCH DIALING NUMBERS

- 1 At the **Start** screen, press **Names**, scroll to **1-touch dialing** and press **Select**.
- 2 Scroll to the 1-touch dialing location you wish to delete and press **Options**.
- 3 Scroll to **Delete** and press **Select**. You are asked to confirm the deletion.
- 4 Press **OK** to delete the key assignment.

• INTERNATIONAL DIALING

International numbers require a prefix specific to the country *from which you are calling*. Ensure your phone always has the correct home prefix by doing *both* of the following.

Save international numbers with a + in front

Save all international numbers with a + in front. For example, a number to Finland from Canada would look as follows: (+011 123456789).

Set the international prefix

- 1 Press **Menu 4-3-3 (Settings > Call settings > International prefix)**. After a brief pause, an entry box appears in the display.
- 2 Enter the prefix specific to the country from which you are calling and press **OK**. For example, in Canada or the United States, enter 011.

10 Customize your phone

The Nokia 6340i can be customized easily to fit your life-style. The display language, ringing tones, audio, and accessory settings (among others) can all be modified to suit your needs. Now, it is even possible to use a TTY or TDD device with your phone in all modes of operation (analogue or digital).

• SET THE DISPLAY LANGUAGE

- 1 At the **Start** screen, press **Menu 4-4-1** (**Settings > Phone settings > Language**).

After a brief pause, **Automatic**, **English**, **Français**, **Español**, and **Português** appear in the display.

- 2 Scroll to the language of your choice and press **Select**.



Note: The Language setting affects the time and date formats of the Clock, Alarm clock, and Calendar.

• PROFILES

Profiles define how your phone reacts when you receive a call or a message, the sounds your keypad makes whenever you press a key, and more. Ringing options, keypad tones, and other settings for each of the 5 available profiles can be left at their default setting, or customized to suit your needs. Select and customize the most suitable profile for your situation, such as when you are in a meeting or outdoors. The following profiles are available:

- **Normal**
- **Silent**
- **Meeting**
- **Outdoor**
- **Pager**



Note: Profiles are also available for accessories such as a headset, TTY device, and car kit. See "Select and customize an accessory profile" on page 63 for more information about accessory profiles.

Select a profile

- 1 At the **Start** screen, press **Menu 3 (Profiles)**.
After a brief pause, the list of profiles appears in the display.
- 2 Scroll through the available profiles and press **Select** once the profile of your choice is highlighted.
- 3 Scroll to **Select** and press **Select**.



Tip: You can briefly press the power key to display the list of profiles. Each press of the power key thereafter scrolls through the list. Once a profile is highlighted, press and hold the power key to select the profile.

Customize a profile

You can customize any of the profiles a variety of ways.

- 1 At the **Start** screen, press **Menu 3 (Profiles)**.
After a brief pause, the list of profiles appears in the display.
- 2 Scroll to the profile you wish to customize and press **Select**.
- 3 Scroll to **Customize** and press **Select**.
- 4 Use the scroll keys to display each of the options in the following table. Once you arrive at the option you would like to customize, press **Select**.



Note: You cannot rename the **Normal** profile.

Custom profile options

Ringing options	Select the ringing tone style
Ringing tone	Select the ringing tone for incoming calls
Ringing volume	Set the volume of your ringing tone
Vibrating alert	Turn the vibrating alert on or off
Message alert tone	Select the tone for received messages

Custom profile options

Keypad tones	Set the volume of your keypad tones (or turn them off)
Warning tones	Turn warning and confirmation tones on or off
Alert for	Define which caller groups the selected profile will accept or decline. See "Caller groups" on page 36 for more information.
Profile name	Rename the profile (up to 16 characters) *

* – You cannot rename the **Normal** profile.

Set a timed profile

Timed profiles can be used to prevent missed calls. For example, suppose you attend an event that requires your phone be set to **Silent** before the event starts, but you forget to return it to **Normal** until long after the event. During this time, you have missed several calls because the ringing tone was silent. A timed profile can prevent this by automatically returning your phone to the default profile at a time you specify.



Note: Timed profiles can be set up to 24 hours in advance.

- 1 At the **Start** screen, press **Menu 3 (Profiles)**.
After a brief pause, the list of profiles appears in the display.
- 2 Scroll to the profile you wish to activate and set for timed expiration, then press **Select**.
- 3 Scroll to **Timed** and press **Select**.
- 4 Enter the time for the profile to expire and press **OK**.

The profile you have set for expiration is now active and appears in the **Start** screen along with a small "clock" icon.

• ACCESSIBILITY OPTIONS

For TTY users

Until now, most mobile phones were incompatible with TTY devices in digital mode. Your Nokia 6340i phone is compliant with TTY devices *in all modes*.



Note: TTY/TDD is a network dependent feature. Check with your wireless provider for availability and description of services.

WHAT YOU WILL NEED

In addition to your phone, you will need the following for TTY communication:

- A TTY device that is "cellular ready" or "cellular compatible"
- A cable for connecting the TTY to your phone; usually supplied by the manufacturer of the TTY device
- The Nokia TTY adapter HDA-8, which can be purchased as an accessory



Important: The Nokia TTY adapter HDA-8 is for use with compatible TTY devices and headsets only. Please check your TTY device or headset to ensure that the connection is compatible. Nokia original headsets attach directly to the phone and do not require this adapter. Nokia does not endorse, warrant, or authorize use of any accessories not manufactured or licensed by Nokia.

Select and customize an accessory profile



Note: You must have an accessory (such as a loopset) attached to your phone prior to selecting the **Accessory settings** menu.

To select and customize profiles for use with the headset, handsfree device (car kit), loopset, and TTY/TDD:

- 1 Press **Menu 4-6 (Settings > Accessory settings)**.

After a brief pause, the list of accessory profiles appears in the display.

- 2 Scroll to one of the following Accessory profiles and press **Select**.

- Headset
- Loopset
- TTY/TDD
- Handsfree

IF YOU SELECTED HEADSET

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Default profile** - Choose the profile you wish to be automatically activated when a headset is connected
- **Automatic answer** - Calls are answered automatically after 1 ring when a headset is connected. Scroll to **On** or **Off** and press **Select**

IF YOU SELECTED HANDSFREE

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Default profile** - Choose the profile you wish to be automatically activated when your phone is connected to a car kit.
- **Automatic answer** - Calls are answered automatically after 1 ring when a car kit is connected. Scroll to **On** or **Off** and press **Select**.
- **Lights** - Choose to keep the phone lights always on, or to shut off automatically after several seconds. Scroll to **On** or **Automatic** and press **Select**.

IF YOU SELECTED LOOPSET

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Use loopset** - Enable use of the LPS-1 mobile inductive loopset. Scroll to **Yes** or **No** and press **Select**.
- **Default profile** - Choose the profile you wish to be automatically activated when a loopset is connected.
- **Automatic answer** - Calls are answered automatically after 1 ring when a loopset is connected. Scroll to **On** or **Off** and press **Select**.

IF YOU SELECTED TTY/TDD


The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Use TTY** - Enable the use of a TTY/TDD device. Scroll to **Yes** or **No** and press **Select**.

-  **Note:** If the loopset is enabled, you will be asked to disable the loopset before enabling TTY/TDD. Press **Yes** to disable the loopset (thus enabling TTY/TDD). Press **No** to leave the loopset enabled.

Connect TTY hardware

- 1 The TTY device comes with a cable. Plug the larger end of this cable into the input jack on the TTY.
- 2 Plug the other end of the cable into the TTY adapter HDA-8.
- 3 Plug the HDA-8 into the connector on the bottom of your phone.

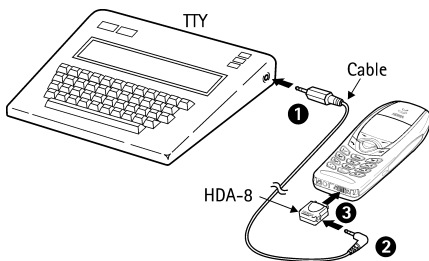

Make a call with TTY

-  **Note:** You must have an accessory attached to your phone prior to selecting the accessory settings menu.

- 1 At the **Start** screen, press **Menu 4-6-4-1-1** (**Settings > Accessory settings > TTY/TDD > Use TTY > Yes**). After a brief pause, a confirmation message appears in the display.

-  **Note:** After selecting **Yes**, this becomes the default and you will not have to do it again unless you turn TTY/TDD off.

- 2 Press  to return to the **Start** screen.
- 3 Enter the number you wish to call (on the phone) and press .
- 4 When the receiving party answers, begin typing your conversation on the TTY.

End a TTY call

- Press  on the phone

Receive a TTY call

- 1 Make sure the TTY and phone are connected.
- 2 When the phone vibrates (if vibrate is on), press  to answer the call, and then type your response on the TTY.
- 3 To hang up, press  on the phone.

• OPTIONAL HEADSETS

The HDC-9P and HDE-1 headsets can be purchased separately as accessories.


Connect the headset

- 1 Plug the headset jack into the accessory connection on the bottom end of your phone.
- 2 Place the round headset ear plug in your ear.

With the headset connected, you can make, answer, and end calls as usual.

- Use the keypad to enter numbers
- Press  to place a call
- Press  to end a call

When in use, the headset microphone hangs at the side of your head. Although it may seem far from your mouth, you can speak at normal volume.

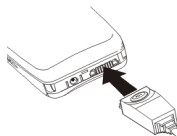

VOICE DIAL A NUMBER WITH THE HDC-9P HEADSET

Once you have voice tagged entries in your Phone book, you can make a call with the HDC-9P headset by simply pressing and holding the remote button on the microphone. See "Assign a voice tag" on page 53 for information on setting up voice tags if you have not already.

- 1 At the **Start** screen, press and hold the remote button on the headset. Your phone beeps and **Please speak now** appears in the display.
- 2 Within 3 seconds, pronounce the voice tag into the microphone.

Once the voice tag is recognized, the tagged entry appears in the display, replays through the earpiece, and the number is dialed.

• AUDIO SETTINGS

Much like a stereo, your phone's audio can be customized to your preference. You can choose from a list of 4 equalizer presets or create up to 2 custom sets of your own.

Choose an equalizer set


- 1 At the **Start** screen, press **Menu 4-3-2 (Settings > Call settings > Equalizer)**. After a brief pause, the following equalizer sets appear in the display.

Normal	Switches the Equalizer off
Bright	Amplifies higher frequencies
Dark	Amplifies lower frequencies
Loudness	Amplifies both higher and lower frequencies
Set 1	Customizable equalizer setting
Set 2	Customizable equalizer setting

- 2 Scroll to the equalizer set of your choice and press **Select**. A graphic of the equalizer set you have chosen appears in the display.
- 3 Press **OK** to activate the set or **Back** to return to the list of sets.

Create a Custom equalizer set

- 1 At the **Start** screen, press **Menu 4-3-2 (Settings > Call settings > Equalizer)**. After a brief pause, a list of equalizer sets appears in the display.
- 2 Scroll to **Set 1** (or **Set 2**) and press **Select**.
- 3 Scroll to **Edit** and press **Select**. **Set 1** appears in the display with the first bar highlighted.
- 4 Press **Adjust**, then use the scroll keys to adjust the setting. When you are finished, press **Save**.

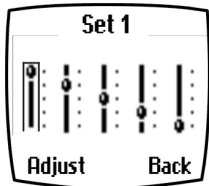

- 5 Press  to select the next bar. Press **Adjust**, and use the scroll keys to adjust the setting. When you are finished, press **OK**.
- 6 Press  to select additional bars. Press **Adjust** and use the scroll keys to modify each bar's setting. Press **OK** to accept any settings before continuing to the next bar.
- 7 Once you are finished, press **Back**, where you can **Activate** the setting, return to **Edit**, or **Rename** the setting.

CHOOSE AN EQUALIZER SET WHILE IN CALL

- 1 While in a call, press **Options**, scroll to **Equalizer**, and press **Select**.
- 2 Scroll to one of the 6 equalizer settings and press **Activate**.

• DOWNLOAD A RINGING TONE

In addition to 30 ringing tones that come with your phone, you can download up to 10 more over the Internet, or have them sent to your phone via SMS. You can also create ringing tones of your own and send them to your phone or other compatible phones using Nokia PC Suite. For more information on PC Suite, see the PC Connectivity Guide in the Download Software section at www.nokia.ca.



Note: This function can be used only if it is supported by your network operator or wireless provider. Only phones that offer download features can receive ringing tones. Contact your wireless provider for details.

When you receive a ringing tone

Ringing tone received appears in the display.

LISTEN TO THE TONE

- 1 Press **Options**, scroll to **Playback**, and press **Select**.
- 2 To stop playing the tone, press **Quit** or .

DISCARD THE TONE

- Press **Options**, scroll to **Discard**, and press **Select**.

SAVE THE TONE

- 1 Press **Options**, scroll to **Save**, and press **Select**.
- 2 Scroll to an available slot and press **Replace**.

11 Manage phone security

You can lock your keypad, restrict selective calls, and use security codes to secure your phone against accidental or unauthorized use.



Important: When Keyguard is on, it may be possible to dial emergency numbers (for example, 911 or other official emergency numbers). Key in the emergency number and press . The number is displayed only after you have keyed in its last digit.

• LOCK AND UNLOCK THE KEYPAD (KEYGUARD)

Remember to lock your phone's keypad to prevent accidental calls. If the keypad is locked, it unlocks when you receive a call. After the call the lock automatically reactivates.

LOCK THE KEYPAD (KEYGUARD)

- At the **Start** screen, press **Menu** . **Keys locked** appears in the display.

UNLOCK THE KEYPAD

- At the **Start** screen, press **Unlock** . **Keys unlocked** appears in the display.

• SECURITY LEVELS

The security level determines your access to features when a "non-owner" SIM card is used. A "non-owner" SIM card is one (other than the original) that is inserted after you power off the phone. There are 3 security levels:

Security levels

Off	Owner and Non-owner cards are treated the same
Memory	Non-owner cards can access SIM memory. Any changes to the memory setting requires the security code.
	The owner card has access to all features, but the security code is required to change a memory setting
Phone	The security code is required upon power-up

Set your security level

- 1 At the **Start** screen, press **Menu 4-7-3 (Settings > Security settings > Security level)**.
- 2 After a brief pause, you are prompted to enter the security code. The default code is 12345. Enter the security code and press **OK**.
- 3 Scroll to **Off**, **Memory**, or **Phone** and press **Select**.

• FIXED DIALING

Once you set up and activate a fixed dialing list, your phone can make calls *only* to those numbers that you have defined in the fixed dialing list. Fixed dialing is a network feature and must be supported by your wireless provider.

Set up and activate a fixed dialing list

- 1 At the **Start** screen, press **Menu 4-7-2 (Settings > Security Settings > Fixed dialing)**.

The options in the following table appear in the display:



Note: If you activate fixed dialing and the number list is empty, all outgoing calls, except for emergency numbers such as 911, require entry of the PIN2 code.

Fixed dialing options

On	Activate fixed dialing (see note above)
Off	Deactivate fixed dialing
Number list	View the numbers in your fixed dialing list

- 2 Scroll to **Number list** and press **Select**. **Fixed dialing not active** and then **Fixed dialing list empty** appear in the display.
- 3 You are prompted to enter the PIN2 code. Enter the PIN2 code and press **OK**.

- 4 Enter the fixed dialing number, or press **Find** to retrieve a number from your Phone book, and press **OK**.
- 5 Enter a name for the number and press **OK**. A confirmation note appears in the display and you are returned to the fixed dialing number list.
- 6 Press **Back**, scroll to **On** and press **Select** to activate fixed dialing.

View or edit the fixed dialing list

- 1 At the **Start** screen, press **Menu 4-7-2 (Settings > Security Settings > Fixed dialing)**.
- 2 Scroll to **Number list** and press **Select**.
- 3 You are prompted to enter the PIN2 code. Enter the PIN2 code and press **OK**.
- 4 Any numbers which you have assigned to fixed dialing appear in the display.
- 5 Scroll to a number and press **Options**.
- 6 The options in the following table appear in the display.

Fixed dialing number options

View number	View the number for an entry
Add	Add a number to your fixed dialing list
Edit	Edit the highlighted entry
Delete	Delete the highlighted entry
Delete all	Delete all entries in your fixed dialing list

- Use the scroll keys to highlight an option
- Press **Select** to activate or enter an option's submenu

Notes about fixed dialing

- If a SIM card with fixed dialing that is activated is inserted into a phone that does not support fixed dialing, the SIM card is rejected
- If you try to add a name (without a number) to the fixed dialing list, you will receive an error message
- If you try to browse the fixed dialing list, but have not stored any numbers, **Fixed dialing list empty** appears in the display
- You cannot access SIM memory manually (view or copy numbers on the SIM card) while fixed dialing is active

• ACCESS CODES

Use access codes to change your security code, PIN code, and PIN2 code.



Note: Avoid using codes similar to emergency numbers such as 911 to prevent accidental dialing of the emergency number.

The security code

The security code controls access to features such as the security level and is supplied with the phone. The preset code is 12345.



Note: If you enter the wrong security code five times in succession, you will not be able to enter a code for five minutes, even if you power off the phone between incorrect entries.

CHANGE YOUR SECURITY CODE

Once you change the security code from its preset of 12345, keep the new code secret, and in a safe place separate from your phone.

- 1 Press **Menu 4-7-4-1 (Settings > Security settings > Access codes > Change security code)**.

After a brief pause, you are prompted to enter the current security code (default is 12345).

- 2 Enter the current security code and press **OK**. You are prompted to enter the new security code.
- 3 Enter the new security code (up to 10 characters) and press **OK**. You are asked to re-enter the new security code for verification.

- 4 Enter the new security code again and press **OK**. A message appears in the display confirming your security code has been changed.

The PIN code

The PIN code protects the SIM card from unauthorized access. The PIN code can be 4 - 8 digits in length. After three successive incorrect entries the PIN code is blocked and you will be asked to enter the personal unblocking key (PUK) code obtained from your wireless provider.



Note: The PIN code must be obtained from your wireless provider. The PIN code is typically provided with your SIM card.

PIN CODE REQUEST

Enable your phone to request the PIN code upon power-up. This provides extra security in case your phone is lost or stolen.

- 1 Press **Menu 4-7-1 (Settings > Security settings > PIN code request)**.
- 2 After a brief pause, you are prompted to enter the current PIN code. Enter the PIN code and press **OK**.
- 3 Scroll to **On** and press **OK**. A message appears in the display confirming your selection.

CHANGE YOUR PIN CODE

Before you can change your PIN code, you will need to enable **PIN code request**. See "PIN code request" immediately preceding this section.

- 1 Press **Menu 4-7-4-2 (Settings > Security settings > Access codes > Change PIN code)**.
- 2 After a brief pause, you are prompted to enter the current PIN code. Enter the PIN code and press **OK**.
- 3 You are prompted to enter the new PIN code. Enter the new PIN code and press **OK**.
- 4 You are prompted to re-enter the new PIN code for verification. Enter the new PIN code again and press **OK**.

A message appears in the display confirming your PIN code has been changed.

The PIN2 Code

The PIN2 code is required for features such as Fixed dialing. If you enter an incorrect PIN2 code three times in succession, the PIN2 code is blocked and you will have to enter the PUK2 code available from your wireless provider.



Note: The original PIN2 code must be obtained from your wireless provider.

CHANGE YOUR PIN2 CODE

- 1 Press **Menu 4-7-4-3 (Settings > Security settings > Access codes > Change PIN2 code)**. You are prompted to enter the current PIN2 code.
- 2 Enter the current PIN2 code and press **OK**. You are prompted to enter the new PIN2 code.
- 3 Enter the new PIN2 code and press **OK**. You are asked to verify the new PIN2 code by entering it again.
- 4 Enter the new PIN2 code again and press **OK**. A message appears in the display confirming you have changed the PIN2 code.

Personal unblocking key (PUK) codes


PUK and PUK2 codes are used to restore blocked PIN and PIN2 codes. Both PUK and PUK2 codes are eight characters in length and cannot be changed. PUK and PUK2 codes must be obtained from your wireless provider.



Important: If you enter an incorrect PUK or PUK2 code 10 times in succession, the message **SIM rejected** appears in the display and the SIM card can no longer be used. You must contact your wireless provider for a new SIM card.

12 Messages

If you have subscribed to a message service, you can send and receive messages to compatible phones that also have a message service. You can also send and receive picture messages and e-mail if supported by your network. Composed messages can be up to 160 characters in length.

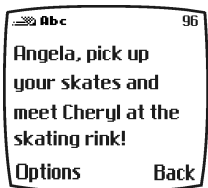

Note: This feature utilizes dynamic memory. See "Dynamic memory use" on page 7 for more information.

Message icons

Icons that precede the title of a message indicate the following:

	The message has not been read
	The message has been read
	A message (which you have composed) has not been sent
i	The message is a delivery report

Before you can send and receive messages

You'll need the following to send and receive messages:

- A messaging service through your wireless provider
- A message center number, which must be saved to your phone (if your wireless provider has not done so already)

Save your message center number

Messages sent by your phone are routed through your wireless provider's message center. Normally, this number is saved to your phone by your wireless provider. To save the number manually, do the following:

- 1 At the **Start** screen, press **Menu** then **Select**, and scroll until **Message settings** appears in the display.
- 2 Press **Select**, scroll to **Default profile**, and press **Select** again.
- 3 Scroll to **Message center number** and press **Select**.
- 4 *If the box in the display is empty*, enter the number given by your wireless provider and press **OK**.
- 5 *If the box is full*, leave the number as it is and press **OK**.

• TIPS FOR COMPOSING A MESSAGE

Predictive text input

Predictive text allows you to write messages using a built-in dictionary. It's much faster than using the traditional "multi-tap" method. For each letter of the word that you are spelling, you only need to press the corresponding key on your keypad *once*. You can use predictive text to write a message, create a calendar note, make a to-do list, and more.

Activate/deactivate predictive text

- At any text entry screen, press and hold **Options**. Predictive text is turned on (or off), depending on its previous mode.

OR

- 1 At a text entry screen, press **Options**, scroll to **Predictive text**, and press **Select**.
- 2 Scroll to the language of your choice and press **Select**.

Predictive text is turned on. The predictive text icon (⌂) appears in the upper left corner of the display.

 


Note: The Language setting affects the time and date formats of the Clock, Alarm clock, and Calendar.

Use predictive text

For example, to write *Nokia*, with the English dictionary selected, press each of the following keys *once*: (with predictive text **on**):

 (for N)  (for O)  (for K)  (for I)  (for A)

The illustration above simulates your display each time a key is pressed.

- Press  to enter a space and begin writing the next word.
- If a displayed word is not correct, press  to see other matches. To return to the previous word in the list of matches, press **Previous**.
- If ? appears after a word, press **Spell** to add the word to the dictionary.
- Press  to insert a period into your message.
- Press and hold  to display special characters. Press  again to cycle through all available characters. See "Use special characters" in the following section for more information on special characters.

 **Note:** Press  to switch predictive text on or off and to use predictive text in various modes. As you press , the following icons (not the descriptions) appear in the upper left of the display:

ABC Uppercase text Predictive text is Off	 Abc Sentence case text Predictive text is On
abc Lowercase text Predictive text is Off	 abc Lowercase text Predictive text is On

Add new words to the dictionary

If you encounter a word that predictive text does not recognize, a question mark (?) follows the word and **Spell** appears in the lower left of the display.

- Press **Spell**, enter your new word using the keypad, and press **Save**.

The word is added to the dictionary as well as to the message you are writing.

NOTES ABOUT ADDING WORDS

- New words that you accept by pressing **Select**, **0 _**, or deleting the space between two words are saved to the dictionary.
- Depending on the language and the length of the words, you may be able to add hundreds of words to the dictionary.
- When the dictionary is full, the most recent addition replaces the first.


Use special characters

While entering text, press and hold *** +** to display the following special characters. Press *** +** again to cycle through all available characters:

.	,	'	?	!	"	-	(	)	@	/
:	_	;	+	&	%	*	=	<	>	£
€	\$	¥	¤	[	]	{	}	\	~	^
ı	¿	§	#	ı	└	⬅				

Use four-way scrolling

Navigate special characters using the 2, 4, 6, and 8 keys much as you would a joystick. Once a character is highlighted press **5 jkl** to insert the character into your message.

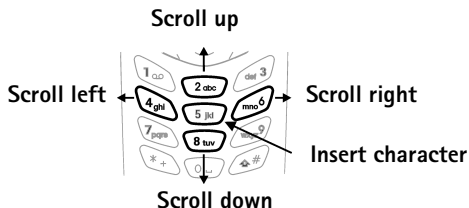

• WRITE AND SEND A MESSAGE

- 1 At the **Start** screen, press **Menu 01-1 (Messages > Write message)**.
- 2 After a brief pause, the message entry screen appears in the display.
- 3 Compose a message using the keypad and press **Options**.
- 4 Scroll to **Send** and press **Select**.
- 5 Enter the recipient's phone number, or press **Find** to retrieve a number from your Phone book, and press **OK**. Your message is sent.

• READ MESSAGES

When you receive a message, your phone beeps and **Message received** appears in the display as well as the unopened letter icon (✉).

- 1 Press **Show** to read the message, or press **Exit** to move the message to your inbox.
- 2 If you have more than one message, scroll to the message of your choice and press **Select** to view the message.



Note: When you have unopened messages in your inbox, ✉ is shown in the upper left corner of the **Start** screen as a reminder.

- 3 Use the scroll keys to view the whole message if necessary.



Tip: Keep scrolling to view other information, such as the sender number and time the message was sent.

- 4 Once you are finished, press **Back** to move the message to the Inbox, or press **Options** for other choices, such as **Reply** or **Forward**.

Read linked messages

Your phone can receive one long message (up to 459 characters) in sequences. You can start reading the first part before the phone has received the entire message.

While viewing the message, you may see **some text missing** on the display. This is normal, and the message content will be updated as soon as the missing sequence arrives.

If the memory is full, you may have to delete a message from your inbox or outbox before your phone can update the missing text.

Reply to a message

- 1 While viewing a message, press **Options**, scroll to **Reply**, and press **Select**.
- 2 Scroll to one of the following reply options and press **Select**.

Reply options

Empty screen	"Congrats"
Original text	"Happy birthday"
Template	"I love you too"
"Yes"	"Hugs and kisses"
"No"	"Sorry"
"OK"	"Sorry I'm late"
"Thank you"	

- 3 When you are satisfied with your reply, press **Options**, scroll to **Send**, and press **Select**.

The number of the original sender appears in the display.

- 4 Press **OK** and your reply is sent.

Forward a message

- 1 While viewing a message, press **Options**.
- 2 Scroll to **Forward** and press **Select**.
- 3 Enter the recipient's phone number, or press **Find** to retrieve a number from your Phone book.
- 4 Press **OK**. The message is forwarded.

• E-MAIL

You can send e-mail up to 160 characters in length to anyone with an e-mail address. First, you will need to set up an e-mail profile and modify a few other settings. It takes just a few minutes, and you only need to do this once.



Important: The e-mail address is included in the total character count for an e-mail message, which is 160 characters. Leave enough space for the e-mail address while composing your message or you will be taken back to the editor, where you will have to delete some text before sending.



Note: You cannot send picture messages with e-mail.



Note: Service providers may customize the SMS message settings interface. For more details about SMS services, please contact your service provider.

Write down the Default recipient number

Write down your **Default recipient number** (also known as the "e-mail gateway" number) in the table below. You may need this number when setting up your phone for e-mail.

Number	Where to find it	Write the number below
Default recipient number (also known as "e-mail gateway")	Your wireless provider	

Set up an e-mail profile

- 1 At the **Start** screen, press **Menu** then **Select** and scroll until **Message Settings** appears in the display.
- 2 Press **Select**, scroll to **Profile 2** (or any open profile) and press **Select** again.
- 3 Scroll until **Messages sent as** appears in the display and press **Select**.

- 4 Scroll to **E-mail** and press **Select**.
- 5 Scroll until **E-mail gateway number** or **Default recipient number** appears in the display and press **Select**.
- 6 Enter the number given by your wireless provider and press **Options**.
- 7 Scroll to **Accept** and press **Select**.
Next, we recommend you rename your sending profile to "e-mail," which will simplify things later when you are ready to send e-mail.
- 8 Scroll until **Rename sending profile** appears in the display and press **Select**.
- 9 Enter a name for the profile (such as **e-mail**) and press **OK**.

• COMPOSE AND SEND E-MAIL



Note: See "Tips for composing a message" on page 76 for ways to write messages faster.

- 1 At the **Start** screen, press **Menu 01-1 (Messages > Write message)**.
After a brief pause, the message entry screen appears in the display.
- 2 Compose your message using the keypad and press **Options**.



Note: Be sure to leave enough space in the total character count (160) for the e-mail address.

- 3 Scroll to **Sending options** and press **Select**.
- 4 Scroll to **Sending profile** and press **Select**.
- 5 Scroll to the profile you created earlier (see "Set up an e-mail profile" on page 81), and press **Select**.
- 6 The gateway, or default recipient number appears in the display. Press **Options**, scroll to **Accept**, and press **Select**.
- 7 Enter the recipient's e-mail address (or press **Find** and retrieve it from your Phone book) and press **OK**. Your e-mail is sent.

• PICTURE MESSAGES

The Nokia 6340i phone comes with 10 pre-loaded pictures and 5 empty storage slots (15 total). You can, however, over-write any of the 10 pictures that come with your phone. Pictures can be attached to a message and sent via SMS to compatible phones. Picture messages behave the same as text messages, but pictures take up more space than text. Pictures are stored in the "Templates" folder under **Messages > Templates**.



Note: You cannot send a picture message via e-mail.

Download pictures

The Nokia 6340i phone can download pictures, or receive them from compatible phones via SMS to use in messages. You can also create pictures and send them to your phone or other compatible phones using Nokia PC Suite, available from the Download Software section of **www.nokia.ca** at no charge.



Note: This function can be used only if it is supported by your network operator or wireless provider. Only phones that offer picture message features can receive and display picture messages. Contact your wireless provider for details.

When you receive a picture message

When you receive a picture message, your phone beeps and **Message received** appears in the display as well as the unopened letter icon (✉).

- 1 Press **Show** to read the message, or press Exit to move the message to your inbox.
- 2 If you have more than one message, scroll to the message of your choice and press **Select** to view the message.



Note: When you have unopened messages in your inbox, ✉ is shown in the upper left corner of the **Start** screen as a reminder.

- 3 Use the scroll keys to view the whole message if necessary.



Tip: Keep scrolling to view other information, such as the sender number and time the message was sent.

- 4 Once you are finished, press **Back** to move the message to the Inbox, or press **Options** for other choices, such as **Reply** or **Forward**.

TO SAVE THE PICTURE

If you would like to save the picture to your Templates folder for later use:

- 1 Press **Options**, scroll to **Save**, and press **OK**.



Note: If your templates folder is full of pictures, just scroll to the picture you would like to replace and press **Select**.

Compose and send a picture message

One picture message is equivalent in size (and cost) to 3 text messages. When you attach a picture to a message, you will have enough remaining space for about 121 characters in the message. If you try and attach a picture to a message which is almost full of text, a beep sounds and you are prompted to erase some text before proceeding.

- 1 At the **Start** screen, press **Menu 01-1 (Messages > Write message)**. Press **Select**.

After a brief pause, the message edit screen appears in the display.

- 2 Write a message using the keypad (or enter nothing if you choose), and press **Options**.



Tip: Attach pictures before adding text. You can then check remaining space for text in the upper right corner of the display.

- 3 Scroll to **Attach picture** and press **Select**.

A list of pictures appears in the display.

- 4 Scroll to a picture and press **View**.

- 5 Press **Attach** to insert the picture into your message, otherwise:

- a) Press **Back**, scroll to another picture, and press **View** again.
- b) Press **Attach** to insert the picture into your message.

- 6 To send the picture message, press **Options**, scroll to **Send**, and press **Select**.

- 7 Enter the phone number for your recipient (or press **Find** to retrieve a number from your Phone book) and press **OK**. The message is sent.

PREVIEW, CHANGE, OR DELETE A PICTURE MESSAGE

- 1 After a picture has been attached to your message, press **Options** at the message edit screen.
- 2 Scroll to one of the following options and press **Select**.
 - a) **Preview** - Previews the attached message before sending. Press **Back** to return to the list of options.
 - b) **Change picture** - Takes you back to the picture list. Scroll to highlight a new picture, press **View** and then press **Attach** to replace the previous picture in your message.
 - c) **Delete picture** - Press **OK** to erase the picture from your message, or press **Back** to return to the list of options.

- **TEMPLATES**

Templates are short, pre-written messages which can be recalled and sent as original messages, or used as a quick reply when you are short on time. You can also customize and save an existing template or create a new one of your own. Templates are stored in the **Templates** folder.

Send a template message

- 1 At the **Start** screen, press **Menu 01-6 (Messages > Templates)**. After a brief pause, the templates folder opens to display a list of templates.
- 2 Scroll to the template of your choice and press **Select**. Available templates are as follows:

Message Templates

"Please call"	"I am late. I will be there at"
"I'm at home. Please call"	"See you in"
"I'm at work. Please call"	"See you at"
"I'm in a meeting, call me later at"	"Sorry, I cannot help you on this."
"Meeting is canceled."	"I will be arriving at"



Note: Pictures are also stored in the Templates folder.

- 3 If you would like to send the template as it is, press **Options**, scroll to **Send**, and press **Select**. Then skip to step 4.

If you would like to modify the template before sending:

- a) Scroll to **Edit** instead of **Send** and press **Select**. You are taken to the message edit display, where you are free to edit the template as you choose.
- b) Once you are finished editing, press **Options**, scroll to **Send**, and press **Select** if you would like to send the message without saving.

To save the template before sending:

- c) Press **Options**, scroll to **Save message** (instead of **Send**), and press **Select**. **Replace original?** appears in the display.
 - d) Press **OK** to save over the template, or press **No** to save it as a new template to a folder of your choice.
- 4 Enter the recipient's number, (or press **Find** to retrieve a number from your Phone book) and press **OK**. The template is sent.

Insert a template into a message

You can also insert a template into a message that you are composing.

- While composing a message, press **Options**, scroll to **Use template**, and press **Select**.

Create a custom template

- 1 Press **Menu 01-1 (Messages > Write message)**. After a brief pause, the message entry screen appears in the display.
- 2 Compose your custom template and press **Options**.
- 3 Scroll to **Save message**, and press **Select**.
- 4 Scroll to the **Templates** folder and press **OK**. Your message is saved as a template.

• ORGANIZE MESSAGES WITH FOLDERS

Save messages to folders

You can save messages to an existing folder or to a folder you have created.

- 1 Press **Menu 01-1 (Messages > Write message)**. After a brief pause, the message entry screen appears in the display.
- 2 Write your message and press **Options**.
- 3 Scroll to **Save message** and press **Select**.
- 4 Scroll to the folder where you would like to save the message and press **OK**. The message is saved.

View saved messages

- 1 At the **Start** screen, press **Menu 01 (Messages)**. After a brief pause, **Write message** appears in the display.
- 2 Scroll until the folder containing the message you wish to view appears in the display and press **Select**.
- 3 Once the folder opens, scroll to the message you wish to view and press **Select**.

Inbox folder

Messages are automatically stored in the inbox after they have been read or if you press  when **Message received** appears on the **Start** screen.

Outbox folder

Store messages that you would like to send at a later date in the **Outbox** folder.

Archive folder

Store messages that have been read in the **Archive** folder.

Templates folder

Pictures and pre-written templates are stored in the **Templates** folder.

My folders

Keep your messages organized by creating custom folders and saving some of your messages there.

ADD A FOLDER OF YOUR OWN

- 1 At the **Start** screen, press **Menu 01 (Messages)**. After a brief pause, **Write message** appears in the display.
- 2 Scroll until **My folders** appears in the display and press **Select**.
- 3 Press **Options**. **Add folder** is highlighted. Press **OK**.
- 4 Enter a name for the new folder and press **OK**. The folder is added.

REMOVE A FOLDER

Only folders created in **My folders** can be deleted. The **Inbox**, **Outbox**, **Archive**, and **Template** folders are protected. When you delete a folder, all messages in the folder are also deleted.

- 1 At the **Start** screen, press **Menu 01 (Messages)**. After a brief pause, **Write message** appears in the display.
- 2 Scroll until **My folders** appears in the display and press **Select**.
- 3 Any folders that you have created appear in the display. Scroll to the folder you wish to remove and press **Options**.
- 4 Scroll to **Delete folder** and press **Select**. You are asked to confirm the deletion.
- 5 Press **OK** to delete or **Back** to exit.

Move a message to a folder

- 1 While viewing the message, press **Options**.
- 2 Scroll to **Move** and press **Select**.
- 3 Scroll to the destination folder and press **Select**. The message is moved.

• DELETE MESSAGES

If your message memory is full and you have more messages waiting at the network,  blinks in the **Start** screen. You can do the following to create more space:

- Read some of the unread messages and then delete them
- Delete some of these messages from your folders

Delete a single message

To delete a single message, you need to open it first.

- 1 Press **Menu 01 (Messages)**. After a brief pause, **Write message** appears in the display.
- 2 Scroll to the folder containing the message you wish to delete and press **Select**. A list of messages appears in the display.
- 3 Scroll to the message you wish to delete and press **Select**. The message opens.
- 4 Press **Options**, scroll to **Delete**, and press **Select**.
- 5 You are asked to confirm the deletion. Press **OK** to delete the message.

Delete all messages in a folder

- 1 At the **Start** screen, press **Menu 01 (Messages)**.
- 2 After a brief pause, **Write message** appears in the display.
- 3 Scroll until **Delete messages** appears in the display and press **Select**.
- 4 Scroll to the desired folder that you wish to delete and press **Select**. You are asked to confirm your deletion.



Important: If you select **All read**, it deletes any messages which have been read in *all* of the folders.

- 5 Press **OK** to empty the folder.

13 Your personal organizer

The Nokia 6340i phone has many useful features for organizing your everyday life, including a calendar, to-do list, and alarm clock. It also has a calculator that can easily convert domestic and foreign currency, plus a new feature called Wallet which allows you to store personal information, such as debit and credit card information to an encrypted area of your phone's memory. In this chapter you will learn how to use your phone as a personal digital assistant.

• CALENDAR

The calendar keeps track of reminders, calls you need to make, meetings, and birthdays. It can even sound an alarm for any of these events.

Open the Calendar


At the **Start** screen, press **Menu 6-1 (Organizer > Calendar)**. After a brief pause, the **Monthly view** appears in the display with the current date highlighted by a black box.

Jan. 2002							wk 4	
M	T	W	T	F	S	S		
14	15	16	17	18	19	20		
21	22	23	24	25	26	27		
28	29	30	31	1	2	3		
4	5	6	7	8	9	10		
Options							Back	

Monthly view

Use four-way scrolling

You can move the cursor in some calendar views using the 2, 4, 6, and 8 keys much the same as a joystick.

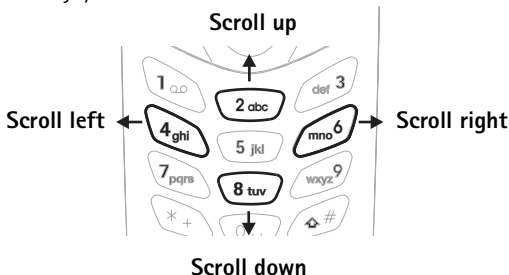

The Monthly view

The monthly view provides an overview of the selected month and weeks. It also allows you to jump to a specific date. Any days that appear highlighted in bold font contain calendar notes such as a meeting or reminder.



Jump to a date

- 1 Press **Menu 6-1 (Organizer > Calendar)**. After a brief pause, the monthly view appears in the display.
- 2 Press **Options**, scroll to **Go to date**, and press **Select**.
- 3 Enter the date (for example 12/15/2002) and press **OK**. The monthly view appears in the display with the "jump date" highlighted.



Make a note for a specific date



Note: This feature utilizes dynamic memory. See "Dynamic memory use" on page 7 for more information.

You can choose from four types of notes; **Meeting**, **Call**, **Birthday**, and **Memo**. Your phone asks for further information depending on which note you choose. You also have the option to set an alarm for any note that you select.

- 1 Jump to a date as outlined in the previous section.
- 2 From the monthly view (with the jump date highlighted), press **Options**.
- 3 Scroll to **Make a note**, and press **Select**.
- 4 Scroll to one of the following note types and press **Select**.



Meeting



Call



Birthday



Memo

- 5 Enter your note, press **Options**, scroll to **Save**, and press **Select**.
 - For a **Meeting** note, you are prompted to enter a location and a start and end time. You are then given the option to set an alarm.
 - For a **Call** note, you are prompted to enter a phone number, a name, and the time. You are then given the option to set an alarm.
 - For a **Birthday** note, you are prompted to enter the person's name, and year of birth. You are then given the option to set an alarm.
 - For a **Memo** note, you are prompted to enter a subject for the memo and the end date the memo is effective. You are then given the option to set an alarm.


View calendar notes – the Day view

After you have created some calendar notes, you can view them as follows:

- 1 At the **Start** screen, press **Menu 6-1 (Organizer > Calendar)**.
After a brief pause, the monthly view appears in the display with the current date highlighted. Any dates that contain calendar notes will be in bold font.
- 2 Jump, or scroll to the date containing the notes you wish to view.
- 3 Press **Options**, scroll to **View day**, and press **Select**. Any notes you have for the day will appear in a list format.

Options while viewing the notes list

- 1 Press **Options** while viewing the day's notes to display the options listed in the following table.
- 2 Scroll to an option. Press **Select** to activate the option or to enter its submenu.

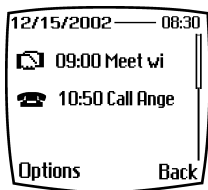

Calendar note options

View	View the full note
Make a note	Make another note for the selected date

Calendar note options

*Delete	Delete the note
*Edit	Edit the note
*Move	Move the note to another date on your calendar
*Repeat	Enable the note to recur on a regular basis (daily, weekly, bi-weekly, monthly, and yearly)
Go to date	Jump to another date on your calendar
*Send note	Send the note to another device via Infrared or SMS as text or in vCal format
*Copy	Copy the note. You can then "paste" the note to another date
*Settings	Set the date and time, date and time format, the day each week starts, and whether you want your notes to auto-erase after a specified time

*Indicates an option that is available only while viewing the body of a note (not the header).

Options while viewing a note

- 1 Press **Options** while viewing a note to display (only) those options which are marked by an asterisk in the *previous* table.
- 2 Scroll to an option. Press **Select** to activate the option or enter its submenu.

Send a Calendar note to another device

SEND A NOTE VIA INFRARED OR SMS



Note: If sending via IR (infrared), ensure the other device is set to receive data via IR. For more information on enabling the receiving device's IR, refer to the user guide for the receiving device.

- 1 At the **Start** screen, press **Menu 6-1 (Organizer > Calendar)**. After a brief pause, the monthly view appears in the display.

- 2 Jump, or scroll to the date containing the note you wish to send.



Tip: Any days containing notes will be in bold font.

- 3 Press **Options**, scroll to **View day**, and press **Select**.
- 4 Scroll to the note you wish to send and press **Options**.
- 5 Scroll to **Send note** and press **Select**.
- 6 Scroll to **Via IR**, **As note**, or **As text msg.**, and press **Select**.
- 7 If you selected **Via IR**, align the infrared ports of both devices and press **Select**. The note is sent.



Important: The preferable distance between two devices in an infrared connection is from 3 inches to 3 feet. There must be no obstructions between the two devices and both IR ports must be pointed at each other.

- 8 If you selected **As note**, enter the number for the recipient (or press **Find** to retrieve a number from your Phone book), and press **OK**. The note is sent.
If you selected **As text msg.**, the note appears in the display.
- 9 Press **Options**, scroll to **Send**, and press **Select**.
- 10 Enter the number for the recipient (or press **Find** to retrieve a number from your Phone book), and press **OK**. The note is sent.

RECEIVE CALENDAR NOTES FROM ANOTHER DEVICE

When you receive a Calendar note, your phone displays **Calendar note received**. You can then save the note in your Calendar and set an alarm for any date and time.

VIEW RECEIVED CALENDAR NOTES

- 1 When your phone displays **Calendar note received**, press **Show**.
- 2 The text of your note appears in the display. Use the scroll keys to view the entire message, if necessary.

SAVE RECEIVED CALENDAR NOTES

- 1 After viewing the **Calendar note**, press **Options**.

- 2 Scroll to **Save** and press **Select**.

DELETE VIEWED CALENDAR NOTES

- 1 After viewing the **Calendar note**, press **Options**.
- 2 Scroll to **Delete** and press **Select**.

• MAKE A TO-DO LIST

You can keep track of your tasks with the to-do list feature. You may be able to save up to 30 notes, depending on their length.



Note: This feature utilizes dynamic memory. See "Dynamic memory use" on page 7 for more information.



Note: To-do notes are not related to specific dates.

Add a to-do note

- 1 At the **Start** screen, press **Menu 6-2 (Organizer > To-do list)**.
- 2 After a brief pause, press **Options**. If this is your first time to use the to-do list, **Add** is highlighted.
- 3 Press **Select**, enter your to-do note and press **Options**.
- 4 Scroll to **Save** and press **Select**.
- 5 Scroll to **High**, **Medium**, or **Low** priority and press **Select**. The to-do note is saved.

Choose other to-do options

When you view a to-do note, you have the following options:

Options while viewing a note

View	View the selected note
Add	Create a note
Delete	Delete a note
Edit	Modify the contents of a note

Options while viewing a note


Edit priority	Change the priority of a note to high, medium, or low
Go to priority	View notes for a specific priority level, such as all of your High priority notes
Save to calend.	Save the to-do note as a calendar note
Send as text	Send the note as a text message to another phone

• WALLET

Wallet allows you to store personal information, such as debit and credit card information to an encrypted area of your phone's memory.



Note: This feature utilizes dynamic memory. See "Dynamic memory use" on page 7 for more information.

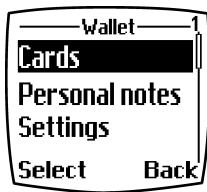

Other Wallet features

You can also store important information in a Wallet personal note. Security features such as a password and data encryption make it ideal for storing personal information such as PIN codes and other sensitive data. See "Compose a personal note" on page 99 for more information about composing a personal note in Wallet.

Notes about Wallet security

- To protect yourself against unauthorized use of Wallet content, you can require a code to be entered each time you use Wallet. See "Activate code request" on page 98 for instructions.
- Your phone has other security features, including a PIN code that can protect your phone against unauthorized use. If you activate PIN code request, your phone asks for the code each time it is turned on. Without the proper code, your phone cannot be used (except for emergency calls). See "PIN code request" on page 73 for more information.

Wallet time-out

If Wallet is open for longer than 5 minutes without any user interaction (keypresses), a query appears in the display asking if you would like to keep Wallet open, or exit. If you do not respond within 5 seconds, Wallet application closes and your phone returns to the **Start** screen.

Create a Wallet code

The first time you access Wallet, you will be asked to create a personalized Wallet code. The Wallet code can be 4 -10 digits in length.

- 1 At the **Start** screen, press **Menu 6-3 (Organizer > Wallet)**. After a brief pause, you are prompted to enter a Wallet code.

- 2 Enter the 4 - 10 digit code of your choice and press **OK**.



Note: Create a code that is unique, yet easy to remember. This will be your key to using Wallet's features in the future. Also, keep your Wallet code in a secret place, separate from your phone.

- 3 Wallet prompts you to verify the code. Enter the code again for verification and press **OK**. A message appears in the display confirming you have created a Wallet code.

Change your Wallet code

- 1 At the **Start** screen, press **Menu 6-3 (Organizer > Wallet)**. After a brief pause, you are prompted to enter your Wallet code.

- 2 Enter your Wallet code and press **OK**.

- 3 Scroll to **Settings** and press **Select**.

- 4 Scroll to **Change code** and press **Select**.

- 5 Enter the original Wallet code and press **OK**.

- 6 Enter the new Wallet code and press **OK**.

- 7 Enter the new Wallet code again for verification and press **OK**. A message appears in the display confirming your change.

Activate code request

To protect yourself against unauthorized use of Wallet content, you can require the Wallet code to be entered each time you use Wallet.

- 1 At the **Start** screen, press **Menu 6-3 (Organizer > Wallet)**. After a brief pause, you are prompted to enter your Wallet code.
- 2 Enter your Wallet code and press **OK**.
- 3 Scroll to **Settings** and press **Select**.
- 4 Scroll to **Code request** and press **Select**. You are prompted to enter the Wallet code.
- 5 Enter the Wallet code and press **OK**.
- 6 Scroll to **On** (or **Off** to deactivate) and press **Select**. A message appears in the display confirming you have activated code request.

Reset the Wallet code

If you forget the Wallet code and wish to erase all the information stored in Wallet, follow these steps.



Caution: Once you reset the Wallet code and clear the contents of Wallet, you cannot restore this information.

- 1 At the **Start** screen, enter ***#3925538#** (or ***#ewallet#**).
A message appears in the display asking if you want to clear your Wallet content and code.
- 2 If you want to permanently delete your Wallet code and its contents, press **OK**.
- 3 Enter the security code and press **OK**. Your Wallet code and content are erased.

• CREATE A WALLET CARD

Wallet cards contain data entry fields for shipping, billing, receipt, and card information. Wallet can hold up to 5 credit card sets.

- 1 At the **Start** screen, press **Menu 6-3 (Organizer > Wallet)**. After a brief pause, you are prompted to enter the Wallet code.
- 2 Enter the Wallet code and press **OK**. Scroll to **Cards** and press **Select**.
- 3 Scroll to a card, press **Select**, then choose from the following options.

Card entry fields

Card info	Enter the card holder, type, number, verification value, expiration day, expiration month, and expiration year
User info	Enter your user name and password
Shipping info	Enter your first, middle, and last name, company name and street address 1, street address 2, city, province, postal code, and country, phone number, and e-mail address
Billing info	Enter your first, middle, last name, company name and street address 1, street address 2, city, province, postal code, country, phone number and e-mail address
Receipt info	Enter the receipt to phone number and receipt to e-mail address
Clear card	Clear the contents of a card
Rename card	Rename the card

Compose a personal note

Wallet can store up to 30 personal notes, such as passcodes or other sensitive data. Your notes are protected by Wallet's security feature.

- 1 At the **Start** screen, press **Menu 6-3 (Organizer > Wallet)**. After a brief pause, you are prompted to enter your Wallet code.
- 2 Enter your Wallet code and press **OK**.
- 3 Scroll to **Personal notes** and press **Select**.

- 4 Press **Add new**, compose your note, and press **Options**.
- 5 Scroll to **Save** and press **Select**.
- 6 Enter a title for the note and press **Options**.
- 7 Scroll to **Save** and press **Select**. Your note is saved.

OPTIONS WHILE COMPOSING A NOTE

Press **Options** while composing a note to display those options listed in the following table:

- Use the scroll keys to highlight an option.
- Use the selection keys to activate an option or to exit the list.

Options while composing a note (if predictive text is on)

*Save	Save the note
Insert word	Return to composing the note. You can then edit the last word entered (highlighted by underscore _)
Insert symbol	Display a list of special characters to insert in to your note
*Predictive text	Turn on predictive text for the available languages. See "Use predictive text" on page 77 for more information

* If predictive text is off, only the options "Save" and "Predictive text" appear in the display

VIEW A WALLET NOTE

- 1 Select **Personal notes** from Wallet's main menu. You are presented with headers of the notes you have composed thus far.
- 2 Press **Options** with any note header highlighted to display the options in the following table.
- 3 Use the scroll keys to highlight an option. Use the selection keys to select an option or exit the list.

Options while viewing the notes list

View	View the contents of the selected note
Edit	Edit the name of note
Add new	Compose and save a new note
Sort	Sort the list of notes by name or date
Delete	Delete the selected note
Delete all	Delete all notes

OPTIONS WHILE VIEWING A NOTE

- 1 While displaying personal notes from the list view, press **Options**, (**View** is highlighted), and press **Select**.
- 2 Press **Options** and the following list of options appears in the display.
- 3 Use the scroll keys to highlight an option. Use the selection keys to select an option or exit.

Options while viewing the body of a Wallet note

Edit	Edit the note
Send as text	Send the note to a compatible phone via SMS
Copy to calendar	Copy the note to any date on your calendar
Use detail	Capture any numbers within the note. The number can then be saved to your Phone book, used to place a call, or you can send a message to the number
Delete	Delete the note

• SET THE TIME AND DATE

Set the clock

- 1 Press **Menu 4-2-1-2 (Settings > Time settings > Clock > Set the time)**.
- 2 After a brief pause, you are prompted to enter the time. Enter the time (in hh:mm format) and press **OK**. The time is set.

Show/hide the clock

You have the option of displaying the clock on the **Start** screen, or hiding it from view.

- 1 Press **Menu 4-2-1-1 (Settings > Time settings > Clock > Show/Hide the clock)**. After a brief pause, a confirmation message appears in the display:
 - If your clock was previously "hidden," (not shown on the display), it will now appear in the upper right corner of the **Start** screen.
 - If your clock was previously shown in the display, it will now be hidden from view.

Change the time format

You can set the time format for am/pm or 24 hour format (military time).

- 1 Press **Menu 4-2-1-3 (Settings > Time settings > Clock > Time format)**. After a brief pause, **24-hour** and **am/pm** appear in the display.
- 2 Scroll to **24-hour** or **am/pm** and press **Select**.

Set the date

- 1 Press **Menu 6-1 (Organizer > Calendar)**. After a brief pause, the monthly view appears in the display.
- 2 Press **Options**, scroll to **Settings**, and press **Select**.
- 3 Scroll to **Set the date** and press **Select**.
- 4 Enter the date and press **OK**. The date is set.

Set or change the date format

- 1 Press **Menu 6-1 (Organizer > Calendar)**. After a brief pause, the monthly view appears in the display.
- 2 Press **Options**, scroll to **Settings**, and press **Select**.
- 3 Scroll to **Date format** and press **Select**.
- 4 Scroll to the format of your choice and press **Select**.
- 5 Scroll to the date separator of your choice (period, slash, or hyphen) and press **Select**. A message appears in the display confirming your selection.

• ALARM CLOCK

The alarm clock is based on your phone's internal clock. It sounds an alert at the time you specify and even works if the phone is off.

Set an alarm

- 1 At the **Start** screen, press **Menu 4-1 (Settings > Alarm clock)**.

IF AN ALARM HAS PREVIOUSLY BEEN SET

After a brief pause, **On** and **Off** appear in the display.

- 2 Scroll to **On** and press **Select**. You are prompted to set the alarm time.
- 3 Enter the time for the alarm in hh:mm format and press **OK**. **Alarm on** appears briefly in the display.



Note:  also appears in the **Start** screen.

IF AN ALARM HAS NOT BEEN SET

You are prompted to enter a time for the alarm.

- Enter a time for the alarm in hh:mm format and press **OK**. **Alarm on** appears briefly in the display.



Note:  also appears in the **Start** screen.

When the alarm sounds

Your phone beeps, vibrates, and the display lights up. **Stop** and **Snooze** appear in the bottom of the display.

WITH THE PHONE ON

Press **Stop** to shut the alarm off.

OR

Press **Snooze**. The alarm stops for 10 minutes and **Snoozing** appears in the display.



Note: If you do not press a key, the alarm stops (snoozes) for 5 minutes, and then sounds again.



WITH THE PHONE OFF

1 The alarm sounds. If you press **Stop** the following appears in the display:

Switch the phone on?



Note: The phone will only power up if you select **Yes** when **Switch the phone on?** appears in the display.

2 Press **Yes** to power up the phone. Press **No** to keep it switched off.



Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Turn off an alarm

- 1 At the **Start** screen, press **Menu 4-1 (Settings > Alarm clock)**.
- 2 After a brief pause, **On** and **Off** appear in the display.
- 3 Scroll to **Off** and press **Select**. **Alarm off** appears briefly in the display.

• USE THE CALCULATOR

- 1 At the **Start** screen, press **Menu 7 (Calculator)**. After a brief pause, the calculator screen appears in the display.
- 2 Enter the first number in your calculation.
 - Press  to enter a decimal point

- Press **Clear** to erase any mistakes
 - Press  to cycle through and select the add (+), subtract (-), multiply (*), and divide (/) characters
- 3 Enter the second number in your calculation.
 - 4 Press **Options**. The following list of options appears in the display. Use the scroll keys to highlight an option. Press **Select** to confirm.

Calculator options

Equals	Displays the sum of your calculation
Add	Adds numbers in the calculation
Subtract	Subtracts numbers in the calculation
Multiply	Multiplies numbers in the calculation
Divide	Divides numbers in the calculation
Square	Squares numbers in the calculation
Square root	Square root of the numbers in the calculation
Change sign	Return to the previous display to select another sign for the calculation (plus sign, minus sign, etc.)

- 5 Press **Select** to complete the calculation as selected in the calculator options. The sum of your calculation appears in the display.

Currency conversion

You can convert foreign currency to domestic, or vice versa directly from the **Start** screen.



Tip: To enter a decimal, press .

- 1 At the **Start** screen, enter a currency amount to convert.

- 2 Press **Options**, scroll to one of the following and press **Select**:

To home	Converts foreign currency to domestic currency
To foreign	Converts domestic currency to foreign currency



Note: If you have not done so already, you are prompted to enter the exchange rate.

- 3 Enter the exchange rate and press **OK**. The converted amount appears in the display.

EDIT THE EXCHANGE RATE

- 1 At the **Start** screen, press **Menu 7 (Calculator)**. After a brief pause, the calculator screen appears in the display.
- 2 Press **Options** (**Exchange rate** is highlighted), then press **Select** and scroll to highlight or display one of the following options:

Foreign units converted to home units	Enter the number of home units it takes to make one unit of foreign currency
Home units converted to foreign units	Enter the number of foreign units it takes to make one unit of your home currency

- 3 Press **Select** to edit your choice.
- 4 Enter the exchange rate and press **OK**. The exchange rate is saved.

14 Your phone and other devices

The Nokia 6340i phone is capable of interacting with, or connecting to a variety of devices using IR (infrared) or the DLR-3P serial cable.

The Nokia 6340i phone can exchange information with other compatible phones, desktop and laptop PCs, and handheld devices. It can also function as a wireless modem when connected to compatible PCs and handheld devices.

• INFRARED BASICS

Your phone can send and receive certain types of data by way of the phone's infrared (IR) port. Transmission and reception must be to or from an Infrared compatible phone or device.

The Nokia 6340i Phone is a Class 1 Laser Product.



Important: The preferable distance between two devices in an infrared connection is from 3 inches to 3 feet. There must be no obstructions between the two devices and both IR ports must be pointed at each other.

Enable infrared communications

Before you can receive information (business cards, calendar or to-do list notes) or make an infrared connection to a PC or handheld device:

- 1 Make sure that the IR ports of the two devices are pointing at each other.
- 2 Press **Menu 9 (Infrared)**.

After a brief pause, **IR reception activated** appears in the display, and the IR icon  appears in the upper left corner of the **Start** screen.

- 3 Have the user of the sending device select the desired IR function to start data transfer.

If data transfer does not start within 2 minutes, the connection is canceled. You must activate IR communications on your phone again.

Check the status of an IR connection

The status of an IR connection is shown by the infrared icon .

- When  appears steady, there is an IR connection between your phone and the other device.
- When  does not appear, no IR connection exists.
- When  blinks, your phone is trying to connect to the other device or the connection has been lost.

• SEND AND RECEIVE INFORMATION

You can send and receive Phone book entries as "business cards" (vcard 2.1 format) using IR between compatible phones, between your phone and a PC running the appropriate software, or between other compatible IR-equipped handheld devices.



Note: This feature utilizes dynamic memory. See "Dynamic memory use" on page 7 for more information.

• BUSINESS CARDS

Create a business card

When you select and send a Phone book entry to a compatible device via IR or SMS, a business card is created.

Send a business card to another device

SEND A BUSINESS CARD BY INFRARED

First, make sure the other phone or device is set to receive data via its IR port. Refer to the user guide for the receiving device for more information on setting up IR communications and receiving data over IR.

- 1 Recall the Phone book entry you would like to send by IR.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Send bus. card** and press **Select**.
- 4 Ensure the IR port of your phone and the other device are pointed at one another and within range (3 inches to 3 feet).

- 5 Scroll to **Via infrared** and press **Select**. The business card is sent.



Note: If your Phone book entry contains more than one number or text entry, you may be asked to choose **Primary no.** or **All details**. In this case, scroll to your choice and press **Select**.

SEND A BUSINESS CARD BY SMS

- 1 Recall the Phone book entry you would like to send by SMS.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Send bus. card** and press **Select**.
- 4 Scroll to **Via text msg.** and press **Select**.



Note: If your Phone book entry contains more than one number or text entry, you may be asked to choose **Primary no.** or **All details**. In this case, scroll to your choice and press **Select**.

- 5 Enter the phone number of the recipient, or press **Find** to retrieve a number from your Phone book.
- 6 Press **OK**. The business card is sent.

Send calendar notes

You can send and receive calendar notes using the same basic procedures as those found in the section "Send a business card to another device" on page 108.

SEND A CALENDAR NOTE TO ANOTHER DEVICE

From the selected calendar day's day list:

- 1 Scroll to the note you wish to send and press **Options**.
- 2 Scroll to **Send note** and press **Select**.
- 3 Point the infrared ports at each other.
- 4 Scroll to **Via IR** and press **Select** to start data transfer.

Receive business cards and calendar notes



Note: This feature utilizes dynamic memory. See "Dynamic memory use" on page 7 for more information.

You can receive business cards and calendar notes from another compatible phone or handheld device.

Before the user of the other phone or devices sends you a card:

- 1 Point the two IR ports at each other.
- 2 Press **Menu 9 (Infrared)**, after a brief pause **IR reception activated** appears in the display.
- 3 When you see the message **Business card received**, press **Show**.
- 4 Press **Options**, scroll to **Save** or **Discard**, and press **Select**.
 - If you press **Save**, you see the confirmation message **Card saved** to phone.
 - If you press **Discard**, you see the question **Discard business card?**. Press **OK** to discard.

● PC CONNECTIVITY

You can make a serial connection between the Nokia 6340i phone and a PC using the DLR-3P serial cable. This cable is available for purchase as an accessory. Once you establish this connection, you can access phone information from your PC, or use your phone as a wireless modem. It may also be possible to make this same serial connection between your phone and an Infrared-equipped laptop or IR-equipped desktop PC using your phone's infrared port.

Nokia PC Suite™

Once your phone is connected to your PC, you can use PC Suite to:

- Make a backup copy of the data in your phone (Content Copier)
- Edit Phone book names and numbers, profiles, and settings via your PC's keyboard (Phone Editor)
- Create ringing tones and transfer them to your phone (PC Composer)
- Create caller group icons or pictures for use with picture messaging (PC Graphics)
- Synchronize the Phone book and reminders with PIM applications such as Microsoft Outlook, Outlook Express, and Lotus Organizer (PC Sync)

Please refer to the *Nokia PC Suite Connectivity Guide* for installation and setup instructions, available from the Download Software section at **www.nokia.ca** at no charge.

Modem Setup

You can use the Nokia 6340i as a wireless modem with your laptop computer or handheld device, giving you access to the Internet (for e-mail and Web browsing) or corporate networks wherever you have service.

For more information on modem setup for PCs and handheld devices, please refer to the *Nokia PC Suite Connectivity Guide*.

Download PC Suite software

PC Suite software and documentation for the Nokia 6340i phone can be downloaded from the Download Software section of **www.nokia.ca**.

15 Fun and games

The Nokia 6340i phone is programmed with four interesting and challenging games, some of which can be played via IR against another opponent.



Warning: Do not switch on the phone to use this function when wireless phone use is prohibited or when it may cause interference and danger.

• GAMES MAIN MENU

Press **Menu 8 (Games)** at the **Start** screen. After a brief pause you are presented with the following menu.

1 Select game – Select from **Snake II**, **Pass 'n Rush**, **Bumper**, and **Pairs II**.

2 Settings – Control game sounds, lights, and shakes.



Note: Game sounds only applies to games and does not affect other features in your phone.

Snake II

Feed the snake with as many goodies as possible and watch it grow. Use the , , , and  keys to maneuver the snake toward food. The longer the snake's tail grows, the higher your score. You can choose from a clear field, or select from five different mazes. If the snake runs into its own tail or one of the walls, the game is over. You can visit Nokia game services on the Internet to download new mazes. Contact your wireless provider for details.

Pass 'n Rush

Play the role of head coach. Select the plays for your team and watch the action unfold. Choose from a quick match, full game, or scenario.

Bumper

Get your highest score by keeping the ball on the table using the flippers. Press and hold **5 jkl** to launch the ball. Hold down **5 jkl** to get more launch power. Use keys **1 op** and **der 3** to control the flippers. Use **4 ghi** and **msc 6** to nudge the table – but not too much or the game will tilt! You can visit games services on the Internet to download new tables. Contact your wireless provider for details.

Pairs II

Reveal pictures to find pairs with as few tries as possible. Use the **2 abc**, **4 ghi**, **msc 6**, and **8 tuv** keys to move the cursor. Press **5 jkl** to reveal a picture. In **Time trial**, pair up all of the tiles before the dynamite fuse runs out.

• START A GAME

- 1 At the **Start** screen, press **Menu 8 (Games)**.
- 2 After a brief pause, the games menu appears in the display.
- 3 Scroll to **Select game** and press **Select**.
- 4 Scroll to the game you wish to play and press **Select**. Press any key during the game animation to enter the selected game's menu, where you can choose from several game-dependent options.

16 Accessories


Extended 1000 mAh Li-Ion Battery (BLB-3)

Provides up to 2.5 - 4 hours of TDMA talk time and

up to 3.5 - 6 hours of GSM talk time.

Provides up to 9 - 14 days of TDMA standby time and


up to 10 - 25 days of GSM standby time.

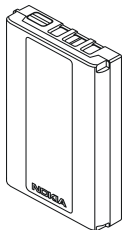

Note: Operation times are estimates and may vary depending on network conditions, charging and phone use.

Rapid Cigarette Lighter Charger (LCH-9)

Quickly charges the phone's battery from your vehicle.

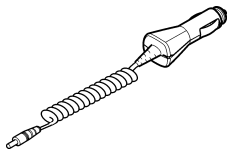


Compact Desktop Charging Stand DCH-8

Compact and stylish, this stand provides a convenient spot in which to charge the phone.

Compatible with:

Standard Travel Charger (ACP-7U)

Rapid Travel Charger (ACP-8U)

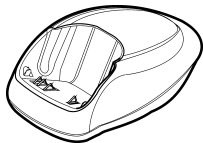

Also available:

Connectivity Deskstand (DCH-8D)

Handsfree Desktop Charging Stand (DCH-12K)


Spare Battery Charger (DDC-1)

Lightweight and stylish, this charger provides a convenient way to charge your spare battery.

Compatible with:

Standard Travel Charger (ACP-7U)

Rapid Travel Charger (ACP-8U)

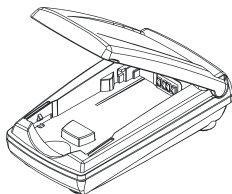


Rapid Travel Charger (ACP-8U)

This lightweight rapid travel charger is ideal for active travelers. It plugs directly into the phone and can also be used with the Compact Desktop Charging Stand (DCH-8).

Also available:

 Standard Travel Charger (ACP-7U)



Headset Kit (HDC-9P)

The headset provides handsfree operation and has an answer/end button located on the microphone. It connects directly to the phone, requiring no additional adapter.

Also available:

Headset (HDE-1)



Loopset (LPS-1)

With the Nokia Loopset, people who use a T-coil equipped hearing aid have the freedom to talk on a digital mobile phone. The loopset goes around your neck - so it can be worn comfortably and discreetly.


Also available:

Phone Adapter for TTY/TDD and Headsets (HDA-8)



Leather Carry Case (CSL-17)

Luxurious leather case protects your phone and has a convenient, integrated belt clip.

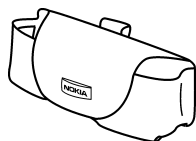

Leather Carry Case (CSL-27)

Includes Swivel Belt Clip



Data Cable (DLR-3P)

For e-mail, faxes, Internet and data transmissions. Easy and convenient connection with no modem or PC card needed.




Compatible with:

Connectivity Deskstand (DCH-8D)


Complete Car Kit (CARK-91)

Provides handsfree use and connection to an external antenna.

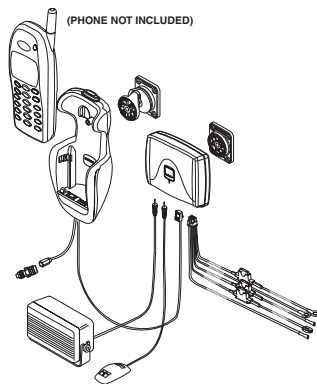

Mobile Holder (MBC-1)

Holds phone securely in place while driving or during charging. Can be used with Rapid Cigarette Lighter Charger (LCH-9).

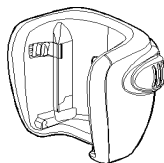

17 Reference information

This section provides information about your phone's batteries, accessories, chargers, safety guidelines and technical information. Be aware that the information in this section is subject to change as batteries, chargers, and accessories change.

• BATTERIES AND CHARGERS

This phone is intended for use when supplied with power from the ACP-7U, ACP-8U, and LCH-9 chargers. Other usage could invalidate any approval given to this apparatus and might be dangerous.



Warning: When you purchase batteries, chargers, and accessories for your phone, use only batteries, chargers, and accessories that have received approval from the phone's manufacturer. The use of any other type of phone-related hardware will invalidate any approval or warranty applying to the phone, and could also be dangerous. For availability of approved batteries, chargers, and accessories, check with your dealer.

- When the battery is fully charged, the indicator will tell you that the battery is fully charged.
- When you are not using a charger, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging could shorten its lifespan. If left unused, a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge. Therefore, allow it to cool down or warm up before trying to charge it.

When the battery is running out of power and your phone only has a few minutes of talk time remaining, a warning tone sounds and the **Battery low** message appears briefly. When no more talk time is left, a warning tone is sounded and the phone switches off.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object, like a coin, a clip, or a pen causes a direct connection of the + and - terminals of the battery, which are metal strips on the end of the battery.

An example of short-circuiting could occur if you carry a spare battery in your pocket or purse, where the battery could come into contact with such objects as a coin. Short-circuiting could damage either the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in either summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15° C and 25° C (59° F and 77° F).

A phone with a hot or cold battery might not work temporarily, even if the battery is fully charged. The performance of Li-Ion batteries is particularly limited in temperatures below 0° C (32° F).

The following list provides guidelines that you can follow:

- When the operating time (talk time and standby time) is noticeably shorter than normal, buy a new battery.
- Use the battery only for its intended purpose.
- Never use any charger or battery that is damaged and/or worn out.
- Batteries must be recycled or disposed of properly. Do not dispose of batteries by putting them in fire!
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

• **IMPORTANT SAFETY INFORMATION**

Traffic safety

Do not use a wireless telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

Operating environment

Remember to follow any special regulations and always switch off your phone wherever forbidden, or when it may cause interference or danger.

When connecting the phone or accessory to another device, read its user's guide for safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised to operate this equipment only in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Pacemakers

Pacemaker manufacturers recommend a distance of 20 cm (6 inches) be maintained between a hand-held wireless phone and a pacemaker to avoid interference with the pacemaker. These recommendations are consistent with independent research and recommendations of Wireless Technology Research.

PERSONS WITH A PACEMAKER:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- Should switch off the phone immediately if there is any reason to suspect that interference is taking place.

Hearing aids

Some digital wireless phones may interfere with hearing aids. In the event of such interference, consult your wireless provider.

Other medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if it is adequately shielded from external RF energy, or if you have any questions.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to RF energy.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals emanating from your wireless phone.

Posted facilities

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions regarding the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer/storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would be advised to turn off your vehicle engine.

Vehicles

Only qualified personnel should install or service the phone in a vehicle. Faulty installation or service may be dangerous and invalidate the warranty.

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (for example, electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems and air bag systems).

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Ensure all wireless phone equipment in your vehicle is mounted and operating properly.

Do not carry or store flammable liquids, gases or explosive materials in the same compartment as the phone or its accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place any objects in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Aircraft

Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, legal action, or both.

Emergency calls



Important: This phone, like any wireless phone, operates using radio signals and cannot be guaranteed to connect in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (such as medical emergencies).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local wireless providers for more information.

MAKING AN EMERGENCY CALL:

- 1 If the phone is not on, switch it on.



Important: Some networks may require that a valid SIM card be properly inserted in the phone.

- 2 Press and hold  to return to the **Start** screen.
- 3 Enter the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
- 4 Press .

If certain features are in use (Keyguard, fixed dialing, and so on), you may first need to turn those features off before you can make an emergency call. Consult this guide and your local wireless provider for more information.

When making an emergency call, remember to provide all information as accurately and clearly as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident - do not cut off the call until given permission to do so.

Certification Information

THIS MODEL 6340i PHONE MEETS GOVERNMENT REQUIREMENTS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy set by Industry Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the Industry Canada is 1.6 W/kg* Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, compliance with the Canadian Standard must be shown. The highest SAR value for this model phone when tested for use at the ear is 1.20 W/Kg and when worn on the body, as described in this user guide is 0.58 W/Kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for RF exposure.

* The SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of body tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at www.nokia.com.

18 Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years. When using your phone, battery, charger, or any accessory:

- Keep all parts and accessories out of small children's reach.
- Keep all parts and accessories dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits.
- Do not use or store parts or accessories in dusty, dirty areas. Moving parts can be damaged.
- Do not store parts or accessories in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store parts or accessories in cold areas. When the phone warms up (to its normal temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not attempt to open. Non-expert handling could cause damage.
- Do not drop, knock or shake. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean parts or accessories.
- Do not paint. Paint can clog moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

• TROUBLESHOOTING

The following table lists some common problems and their solutions.

Problem	Possible cause	Possible solution
My phone is not charging	The charger and phone are not properly connected	Securely connect the charger to the phone
	The charger is not properly plugged into the wall	Ensure the charger is plugged in correctly
My phone is not making/receiving calls	The battery is not charged	Charge the battery
	The signal strength is poor	If you are indoors, move toward a window
I cannot listen to my voice messages	You do not have voicemail service	Call your wireless provider
	You have not set up your voicemail service with your wireless provider	Call your wireless provider
	You have not saved your voicemail number to your phone	See "Call and set up your voicemail" on page 44
	You've forgotten your password or are entering it incorrectly	Call your wireless provider
	The voicemail number you have saved to your phone is incorrect	Call your wireless provider
When I insert my SIM card into another phone, it is rejected	You have fixed dialing activated on your SIM card and the receiving phone does not support fixed dialing	Deactivate fixed dialing on the SIM

19 Frequently Asked Questions (FAQ)

Q. What if my phone is lost or stolen?

A. Contact your wireless provider immediately.

Q. Does the phone have to be on in order for me to receive a call?

A. Yes.

Q. What is my security code?

A. Your default security code is **12345**. If you have changed your security code and forgotten the new code, contact your wireless provider.

Q. How do I lock the keypad?

A. Press **Menu** .

Q. How do I unlock the keypad?

A. Press **Unlock** .

Q. How do I keep track of my calls?

A. Use the **Call log** feature (see page 40).

Q. How do I turn off the ringer when I am in a meeting or do not want to be disturbed?

A. Briefly press the power key, scroll to **Silent**, and press **Select**. You can also set a timed profile (see "Set a timed profile" on page 62).

Q. How do I make the phone ring louder?

A. See "Customize a profile" on page 61.

Q. How do I change the ringing tone?

A. See "Customize a profile" on page 61.

Q. How do I download a custom ringing tone?

- A. You can send tones to your phone over the Internet, using SMS, or you can create custom tones and send them to your phone or another compatible phone using PC Suite. Call your wireless provider for more information.

Q. Where is my phone's model number and Serial number?

- A. On the information label, which is on the back of the phone under the battery. The model number of this phone is 6340i.

Q. What is the IMEI number?

- A. International Mobile Equipment Identifier (IMEI). The IMEI number is on the information label, which is on the back of the phone under the battery.

Q. How do I change the contrast on the display?

- A. The Nokia 6340i contrast is set for optimal performance at the factory and cannot be changed.

Q. Can I replace the front cover?

- A. The front cover should only be removed or replaced by qualified service personnel.

Q. I forgot my Wallet code. Do I have to contact Nokia or my wireless provider to obtain another?

- A. No. You can reset your Wallet code. However, all information previously entered will be lost and you will need to set up a Wallet card again. See "Create a Wallet card" on page 98.

20 Glossary

Term	Definition
antenna	The portion of your phone designed to transmit and receive the wireless signal
antenna jack	The connector used to attach an external antenna to your mobile phone (typically used by the Handsfree kit)
battery	The source of power for your phone when its not connected to the charger
data call	A call that is placed or received where your phone functions as a data/fax modem, connected to your PC via the DLR-3P cable or Infrared (IR) port
delivery report	A message from your messaging service regarding the delivery status of a message that you have sent
dynamic memory	A common "pool" of memory used by multiple features. When any of these features are used, there is less available memory for other features dependent upon dynamic memory
earpiece	The portion of your phone that contains the audio speaker
earpiece volume	The audible level of the earpiece in an active call.
E-mail	Electronic mail - a message sent electronically
ESN	Electronic Serial Number. Used to identify your phone by the wireless provider
fax call	A call placed or received where phone functions as a data/fax modem, connected to your PC via the DLR-3P cable or Infrared (IR)
home system	The wireless system on which you are a subscriber

Term	Definition
IMEI	International Mobile Equipment Identifier. Identifies your phone on the wireless network
keypad tones	The sounds you hear when a key on your phone's keypad is pressed
message alert tone	The sounds you hear upon receipt of a text or system message
navigate	To move from one phone menu to another
number keys	The numbered keys on your phone's keypad
power key	The button on the top of the phone that allows you to turn the phone on or off. It can also be used to recall and switch between profiles
predictive text input	A system developed for the rapid entry of text
ringing option	The way your phone plays (or does not play) the selected ringing tone when you have an incoming call. For example; ascending, ring once
ringing tone	The tone that your phone plays (or does not play) when you have an incoming call. The Nokia 6340i has 40 available ringing tones
ringing volume	The audible level of your phone's ringing tones
screen or display	Your phone's display
scroll	To move through a list of names, menu items, and so on by pressing the scroll (up/down) key. Each new selection or option is highlighted as it is selected

Term	Definition
selection keys	The keys under the lower left and right corners of your phone's display. These keys are defined by the text above them, inside the display
SIM	An acronym for Subscriber Identity Module
SMS	Short Message Service. A service whereby short messages (typically around 160 characters) can be sent and received via your phone
static memory	Memory that has been allocated to a specific feature. Heavy use of one feature does not affect the memory available for the other features that use static memory
URL	Universal Resource Locator. A specific address or location on the Internet such as www.nokia.ca
voice mail	A system maintained by your wireless provider to record voice messages when you are unable to answer a call
voice mailbox	The repository on your wireless provider's network for all voice mail messages
voice memo	A message recorded by your phone's internal recorder
warning tones	The collection of tones that are played when your phone alerts you to a variety of situations
wireless network	Your wireless provider's operating environment, comprised of various types of hardware, software, and land-line connections
World Wide Web (WWW)	A part of the Internet designed to allow easier navigation through the use of graphical user interfaces and hypertext links between different addresses - also called Web

21 Technical information

Weight	125 grams (4.4 ounces) with BLB-3 1000 mAh Li-Ion Battery
Wireless networks	AMPS 800/TDMA 800 and 1900/GSM 850 and 1900
Size (volume)	6.7 cubic inches (110 cc)
Frequency range (Tx)	AMPS: 824 - 849 MHz TDMA 800: 824 - 849 MHz TDMA 1900: 1850 - 1910 MHz GSM 850: 824 - 849 MHz GSM 1900: 1850 - 1910 MHz
Frequency range (Rx)	AMPS: 869 - 894 MHz TDMA 800: 869 - 894 MHz TDMA 1900: 1930 - 1990 MHz GSM 850: 869 - 894 MHz GSM 1900: 1930 - 1990 MHz
Tx output power	1 W (Max)
Battery voltage	3.6 vdc
Talk/Standby time	GSM: Up to 3.5 - 6 hours talk time Up to 10 - 25 days standby time
	TDMA: Up to 2.5 - 4 hours talk time Up to 9 - 14 days standby time
	AMPS: Up to 1 - 1.5 hours talk time Up to 1 - 2 days standby time

Battery operation times

Battery talk and standby times are estimates only and depend on signal strength, network conditions, features used, battery age and condition (including the effect of charging habits), temperatures to which battery is exposed, use in digital mode, and many other factors. Please note that the amount of time a phone is used for calls will affect its standby time. Likewise, the amount of time that the phone is turned on and in standby mode will affect its talk time.

Nokia One-Year Limited Warranty

Nokia warrants that the Nokia wireless phone and accessories are free from defects in material and workmanship. The warranty period for the Phone (Radio) units and all accessories (excluding carry cases) is twelve (12) months from the date of purchase OR fourteen (14) months from date of wholesale shipment from Nokia, OR fifteen (15) months from the date of manufacture by Nokia. The warranty period for the Carry cases is three (3) months from the date of purchase or five (5) months from the date of wholesale shipment from Nokia.

During the warranty period, Nokia will, at its option, repair or replace the defective product free of charge. Replacement Product may be either new or remanufactured or refurbished.

However, if Nokia determines that the warranty conditions cannot be applied, the purchaser will be billed for the repair and shipping.

EXCEPTIONS

This warranty is subject to the following exceptions:

- 1** Mobile or fixed installation, which is not in accordance with the installation instructions, published by Nokia, will void the warranty. Damage caused by a repair or an attempt to repair by other than a service centre authorized by Nokia will void the warranty;
- 2** This warranty covers normal consumer use and does not cover defects or damage to any product which, in the sole opinion of Nokia, has been subject to: improper storage, exposure to moisture or dampness, exposure to fire, sand, dirt, windstorm, lightning, or earthquake; to theft, battery leakage, unauthorized modification, misuse, neglect, abuse, misapplication, accident, alteration, improper installation, maladjustment of consumer controls, or abnormal operating conditions, or which has been attributable to acts of God;

- 3 Fuses are not covered by the warranty;
- 4 This warranty does not cover defects or damages caused by a product which is not approved by Nokia to be connected to its wireless phone;
- 5 This warranty does not cover defects or damages caused by improper or defective function of the carrier system or by inadequate signal reception by the antenna;
- 6 Removal and reinstallation costs are not covered by this warranty;
- 7 This warranty is applicable only to products bought through Nokia Products Ltd. in Ajax, Ontario, Canada, and sold either in Canada or Bermuda.
- 8 Removal, alteration, or defacing of the Serial Number Plate, or the accessory Date Code Labels will void the warranty.

In no event shall Nokia be liable for incidental, special, or consequential damages, direct or indirect, loss of unanticipated benefits or profits, loss of use of its wireless telephone, resulting from the use of its wireless phone, or its accessories, or arising from any breach of this warranty.

CLAIM PROCEDURE

In order to obtain warranty performance, return the defective unit to the Nokia Service Centre with transportation charges prepaid (Shipping of the repaired unit may be paid by Nokia, in which case Nokia shall have risk of loss or damage during this shipment).

The proof of date of purchase will be required before in-warranty service is rendered.

Maintenance and service may be obtained in any authorized service centre in Canada.

EXTENSION OF WARRANTY PERIOD

When a repair is made, an extra 90-day service warranty is given to the labour and parts of the repair concerned. If replacement of a faulty unit is applied, instead of repairing, this 90-day service warranty is applied to the replaced unit.

Besides this 90-day service warranty, the warranty repairs or replacements do not affect the original warranty conditions, which are determined by the date of purchase.

THE FOREGOING WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE.

Some provinces do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

FOR WARRANTY SERVICE LOCATIONS, CONTACT YOUR SERVICE PROVIDER/RETAILER/DEALER OR DIRECTLY TO:

NOKIA PRODUCTS LIMITED

601 Westney Road South

Ajax, Ontario L1S 4N7

Tel: 905-427-1373

1-888-226-6542

Website: **www.nokia.ca**

For products being returned to Nokia or its authorized service centres, the service provider/retailer/dealer shall prepay shipping charges, taxes, duties, insurance. Nokia shall have no risk for loss or damage during this shipment.

NOTE: As warranty is automatically registered, no further action is required by the consumer.

Index

Numerics

1-touch dialing

- assign a key..... 58
- change numbers..... 58
- delete numbers..... 59
- make a call 58

A

abc and 123 modes

- switching between..... 28

access codes..... 72

accessibility

- accessibility solutions 20
- alternate formats 20
- contact 20
- customize audio settings..... 67
- features 21
- mobile inductive loopset 21
- other features..... 21
- TTY 21
- website 20

accessories

- about..... 2
- battery (BLB-3)..... 114
- cigarette lighter charger (LCH-9) 114
- complete car kit (CARK-91). 116
- data cable (DLR-3P) 116
- desktop charging stand (DCH-8) 114
- headset kit (HDC-9P) 115
- leather carrying case (CSL-17/CSL-27)..... 115, 116

- loopset (LPS-1) 115
- mobile holder (MBC-1)..... 116
- rapid travel charger (ACP-8U) 115
- spare battery charger (DDC-1) 114

accessory profiles 63

activate

- automatic redial 52
- call forwarding 50
- loopset..... 64
- TTY/TDD 63
- voice command..... 54
- voice recorder 56
- your wireless service..... 6

adding folders 88

advanced features..... 47

alarm

- setting 103
- snooze 104
- turning off..... 104
- with phone off 104
- with phone on..... 104

alarm clock..... 103

antenna..... 119

- about..... 7
- contact with 7
- definition..... 128
- jack for external use..... 128
- location 7
- proper position 119
- unauthorized use 124

assign a number type..... 31

assigning voice tags 53

audio settings	67
automate voicemail	45
automatic redial	52

B

back cover, removing	9
battery	
charging	10
important information	11, 117
installing	10
operating range	118
operation times	131
prolonging battery life	11
prolonging life	14
removal	12
temperature range	118
voltage	131
battery charger, spare	114
birthday note	91
business cards	
creating	108
receiving	109
sending	108

C

calculator	
currency conversion	105
options	105
using	104
calendar	
4-way scrolling	90
birthday note	91
call note	91
date notes	91
jump to date	91

meeting note	91
memo note	91
monthly view	91
note options	92
note types	91
opening	90
saving notes	91
send note	109
uses	90
view notes	92
view received notes	94

call duration	42
viewing	42

call forwarding	50
activate	50
cancelling	52
definition	50

call log	
about	40
call duration	43
clear call timers	43
delete recent call lists	42
view call duration	42
view dialed calls	41
view missed calls	41
view received calls	41

call note	91
------------------	----

call timers, clearing	43
------------------------------	----

call waiting	49
end both calls	50
end the active call	49
end the active call only	49
incoming calls	49
reject a call	50

reject a waiting call	50	profile names	62
switch between calls	49	ringing options	61
with call on hold.	50	ringing tone.	61
caller groups		ringing volume	61
definition.	36	security codes	72
options.	36	security levels	70
setup	36	time format.	102
calls		voice tags	54
ending	49	charge the battery	10
ending TTY calls	65	charger	
forwarding.	50	connecting.	10, 11
ignoring.	3	information	117
making.	18	charger jack	
redial last	3	location on phone.	8
rejecting	50	clear call lists.	42
using TTY.	65	clock	
cancel call forwarding	52	alarm	103
car charger	114	set the date.	102
car kit	116	show/hide	102
care and maintenance	124	time format.	102
carrying case	115, 116	codes	
certification information	123	access.	72
change		dialing	45
1-touch dialing numbers. . . .	58	PIN	73
audio settings	67	PIN2	74
date format.	103	PUK	74
keypad tones.	62	security	72
memory in use	38	setup voicemail with	46
message alert tone.	61	compose a picture message. . . .	84
number types	31	compose e-mail.	82
phone book view.	35	connect to other devices	110
PIN code	73	connect TTY hardware	65
PIN2 code	74	connecting to a PC	110
primary numbers.	35	connectivity	110

contacting Nokia	6
Content Copier (PC Suite)	110
cover, removing	9
currency	
converting	105
exchange rate	106
to foreign	106
to home	106
currency conversion	105
customer care	
Canada	7
customize	
accessibility	63
audio settings	67
display language	60
download ringing tones	68
options	60
using profiles	60
D	
data cable	116
data synchronization	110
date, setting	102
deactivate automatic redial ...	52
default recipient number	81
definition of terms	128
delete	
phone book entries	29
voice tags	54
desktop charging stand	114
dial international numbers	59
diald calls, viewing	41
dialing codes	
how to use	45
setting voicemail with	46

dictionary	
add new words	77
in predictive text	77
digital data	111
display language	60
DLR-3P	116
download	
pictures	83
ringing tones	68
software	111
user guide	5

E	
e-mail	81
compose and send	82
default recipient number ...	81
gateway number	81
receive and reply to	79
setup	81
emergency calls	
placing	2, 122
things to remember	122
with keypad locked	69
end both calls	50
end key	
location on phone	8
end the active call	49
entering	
addresses	31
business cards	108
names and numbers	30
notes, to phonebook	31
number types	31
text	27

equalizer	67
choose a set	67
customize	67
settings	67
use in a call	68

erase

1-touch dialing numbers	59
voice memos	57

ESN

definition of	128
location on the phone	6

F

FAQ	126
------------------	-----

fixed dialing

definition of	70
edit number list	71
emergency numbers	70
notes about	72
setup and activate	70

folders

adding	88
list of	87
organize messages with	87
removing	88

four-way scrolling

in calendar	90
in special characters	78

frequency range

G

games

Bumper	113
main menu	112
Pairs II	113

Pass 'n Rush	112
settings	112
Snake II	112
start a game	113

glossary of terms

H

headset

connecting	66
------------------	----

headset kit

hearing impaired solutions

hearing impaired

audio settings	67
----------------------	----

I

icons

IMEI

definition of	129
location on the phone	6

in-call options

Infrared connections

install

the battery	10
the SIM card	9

internal antenna

location on phone	8
-------------------------	---

international dialing

IR

activating	107
check status	108
connecting to a PC	110
receiving a business card	109
sending a business card	108
sending a reminder note	109

IR port
location on phone.....8

J
jump to a date.....91

K
keyguard.....69
keypad lock.....69
keys, selection.....17

L
languages
available.....60
setting.....60
shortcut.....24
lithium ion battery.....114
lock/unlock the keypad.....69
loopset
description.....115
how it works.....21
LPS-1.....21

M
Make.....2
meeting note.....91
memo note.....91
memory
phone.....38
phone and SIM.....38
select.....38
SIM card.....38
view available.....38
menu shortcuts.....22
menus, phone.....19

messages
forwarding.....80
message center number.....76
message icons.....75
moving.....88
organize with folders.....87
quick guide to sending.....3
reading.....79
replying to.....80
save to folders.....87
using templates.....85
view saved.....87
write and send.....79

microphone
headset microphone.....66
location on phone.....8
position for calls.....18

missed calls.....41
mobile holder.....116
mobile inductive loopset.....21
moving messages.....88

N
name and no. view.....35
name list view.....35
navigation
of phone menus.....19
using scroll method.....19
using shortcuts.....20
network services
about.....6
Nokia PC Suite.....110
number types.....31

O	
one-touch dialing	58
open phone book	29
options	
calls active and on hold.....	48
while in a call	47
with a call on hold	48
with one call active	47
output power	131
P	
PC Composer	110
PC connectivity	110
PC Suite	110
instructions.....	111
PC Composer.....	110
PC Sync	110
PC Sync	110
personal organizer	90
phone book	
add entries	30
caller groups	36
customize view	35
display entries.....	32
menu	29
options.....	33
primary numbers.....	35
search	32
phone book view	35
name + number	35
name list	35
phone security	
access codes	72
fixed dialing	70
lock the keypad.....	69
security code	72
security levels	69
phone size	131
phone weight	131
picture messages	
compose and send	84
downloading pictures for.....	83
modifying	85
phone behavior when	
received	83
PIN 2 code	74
PIN code	
changing	73
definition of	73
PIN code request.....	73
playback a voice memo	56
power off your phone	14
power on your phone	14
power, transmit	131
predictive text	
about	76
activate and deactivate	76
add new words	77
example of.....	77
using	77
primary number	
assigning	35
copying	39
definition.....	35
profiles	
accessory.....	66
customizing.....	61

definition of.....	60
headset	63
list of	60
loopset.....	63
selecting	61
timed	62
TTY/TDD	63
PUK codes.....	74

Q	
quick guide.....	3

R	
rapid travel charger	115
read messages	79
receive a TTY call	66
received calls	41
record	
phone conversations.....	57
voice commands.....	54
voice memos.....	56
voice tags	53
record a voice memo	56
recorded memos, viewing	56
reference information	
batteries and chargers	117
reject a call	50
reminders	109
remove the battery.....	12
removing folders.....	88
restrict calls	
using fixed dialing	70
ringing tones	
discarding	68

download	68
receiving	68

S

safety

aircraft.....	121
emergency calls.....	122
hearing aids.....	119
important safety	
information	1, 119
operating environment.....	119
other medical devices.....	120
pacemakers	119
potentially explosive	
atmosphers	120
traffic.....	119

save

addresses	31
calendar notes.....	91
notes, to phonebook.....	31
numbers only.....	32
phonebook entries.....	30
ringing tones.....	68

scroll keys

how to use.....	17
-----------------	----

scroll method.....19

search phone book

security

fixed dialing.....	70
lock the keypad.....	69
security code.....	72

security levels

selection keys

how to use.....	17
-----------------	----

sending	
business cards.....	108
calendar notes	93
e-mail	81
messages.....	79
picture messages	83
template messages.....	85
set the display language	60
setup	
voicemail.....	44
your headset	66
shortcuts	20, 22
call log menu	22
games menu	26
messages menu.....	22
organizer menu.....	26
profiles menu	22
settings menu	23
voice menu	26
show/hide clock.....	102
SIM card	
capacity.....	37
copying entries	38
emergency calls	122
if rejected	74
installing	9
non-owner	69
PIN code	73
removing	13
security levels	69
selecting memory	38
service numbers	39
size, phone	131
software download.....	111
spare battery charger.....	114
special characters	
four-way scrolling	78
speed dialing	58
assign a key.....	58
make a call	58
standby time	131
start screen	
description.....	15
returning to.....	17
switch between calls	49
switch off your phone	14
switch on your phone.....	14
switching letter case	28
T	
talk time.....	131
templates	
creating custom	86
inserting into messages	86
sending	85
terms.....	128
text messages	
send calendar notes as.....	96
sending	3, 79
writing with predictive text..	77
time format.....	102
timed profiles	62
transmit	
frequency.....	131
power.....	131
troubleshooting.....	125
TTY	
connect hardware.....	65

end a call	65
illustration	65
make a call	65
receive a call	66
turn on your phone.	14

U

unlock the keypad.	69
---------------------------------	----

updates

to this guide	5
---------------------	---

updates, to user guide	5
-------------------------------------	---

user guides

alternate formats	20
updates to	5

V

vibrating alert

turn on or off	61
----------------------	----

view

available memory	38
calendar notes	92
call duration	42
clock on the Start screen ...	102
diald numbers	41
fixed dialing numbers	71
missed calls	41
monthly view, calendar	91
phone book	29
picture messages	83
received calendar notes	94
received calls	41
received messages	79
recorded memos	56
saved messages	87

special characters	78
wallet notes	100

voice command

adding tags	54
and the volume key	55
delete	55
replace command	55
shortcut	4
use with headset	55

voice dial

change or erase a tag	54
notes about voice tags	52
using	53
using the headset	66

voice messages

voice recorder

delete memos	57
erase memos	57
phone conversations	57
playback a memo	56
playback memos	56
record a memo	56
view memos	56
view recorded memos	56

voice tags

assign	53
assigning	53
change or erase	54
changing	54
displaying	54
erasing	54
for voice commands	54
notes	52

voicemail

automate.....	45
automating.....	45
call and setup.....	44
listen to voice messages.....	44
save mailbox number.....	44
setup.....	44
using.....	44
using dialing codes.....	46
voicemail number.....	44

volume control

location on phone.....	8
------------------------	---

volume, adjusting..... 18**W****wallet**

code request.....	98
create a card.....	98
personal note options.....	100
personal notes.....	99
time-out.....	97
wallet code.....	97

warning tones

turn on or off.....	62
---------------------	----

weight, phone..... 131**wireless modem setup..... 111****wireless network services..... 6****wireless networks..... 131****write and send a message..... 79**

NOTES