

Install Pinnacle Instant CD/DV D

Pinnacle Instant CD/DVD offers an all-in-one complete suite of CD and DVD authoring tools for data management and disc creation. Whether you want to create your own music and burn MP3 mixes, or build digital scrapbooks onto video CDs and DVDs - Instant CD/DVD delivers the most complete set of tools available to ensure that you have command over any file format, on any media type, at any time. InstantCD/DVD cannot be used to copy CSS-encrypted discs.

Installing Pinnacle Instant CD/DV D

1. Insert the Driver installation CD into your CD-ROM drive.

 
2. The Driver Installation program will appear. If your CD does not autorun, double click on Autorun.exe from the CD s root directory to begin the installation. Select Pinnacle Instant CD/DVD from the list.

3. The Installation Program should automatically install your new CD Mastering software.

4. Please input your name, company, and serial when asked to do so.

(please use the serial number: ABDPG-AAATC-KDOZV-GBILA-KRVCA)

4. Congratulations! You are now ready to use your new CD/DVD burning software.

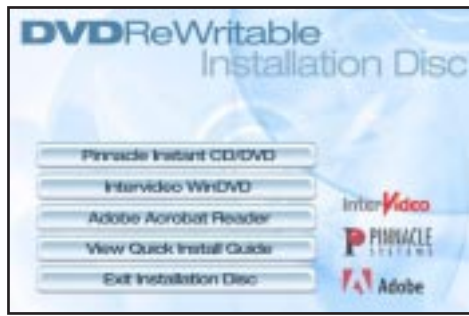

Using Instant CD/DV D

The bundled CD Mastering Software, Pinnacle Instant CD/DVD, provides you with a complete solution for making CD's and DVD's right from your desktop. You can back up your data files to blank DVD- R/- RW, disks for extended storage capacities. You can compile your own Audio CDs or even Copy CD's.

 
Burning A Data DVD/CD



1. Start Pinnacle Instant CD/DVD and select Create->Data from the menus.


2. Select and set the properties of your disc, and click OK after you are satisfied with your settings.

3. Click on the CD Type icon on the bottom left of your window, and select Data 4.7GB for DVD media, or 80Min for CD Data media.

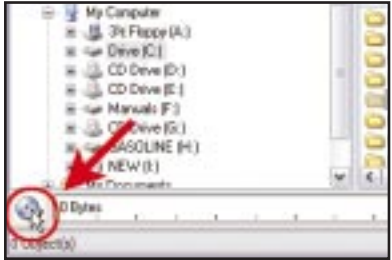


4. Drag and drop the files you wish to burn from the bottom frame, the top frame. Use the progress bar on the bottom of the screen to determine your available Disc Space for your project.

 5. Click on the Write icon when are you are ready to begin burning your project.

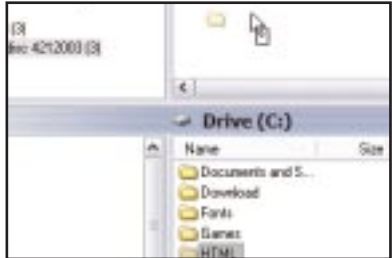

6. Select the appropriate Re Writable drive from the pull down menu, as well as the write speed you wish to burn at. Also check your simulation options and your closing method if you wish to end the session on your project. Then click on the Write button to begin burning.

 7. After writing is completed successfully, click the OK button. (Note: You should select the proper burn speed for your media, most media today is 2.4x)

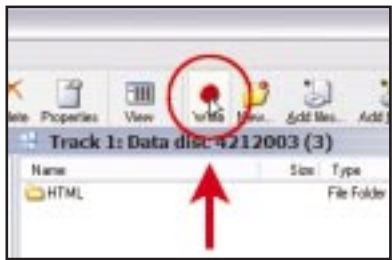

Burning An Audio CD



1. Start Pinnacle Instant CD/DVD and select Create->Audio from the menus.

 
2. Select and set the properties of your disc, and click OK after you are satisfied with your settings.

3. Click on the CD Type icon on the bottom left of your window, and select 80 Min CD.






4. Drag and drop the audio files you wish to burn from the bottom frame, the top frame. Use the progress bar on the bottom of the screen to determine your available Disc Space for your CD project.

5. Click on the Write icon when are you are ready to begin burning your CD project.

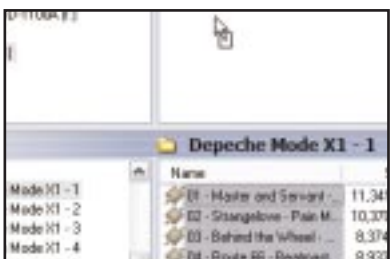

6. Select the appropriate Re Writable drive from the pull down menu, as well as the write speed you wish to burn at. Also check your simulation options and your closing method if you wish to end the session on your CD. Then click on the Write button to begin burning your CD.

   7. After CD writing is completed successfully, click the OK button. (Note: You should select the proper burn speed for your media, most media today is 2.4x)

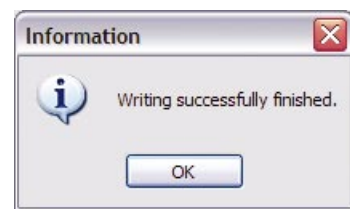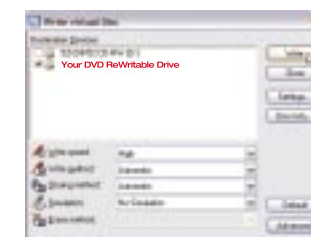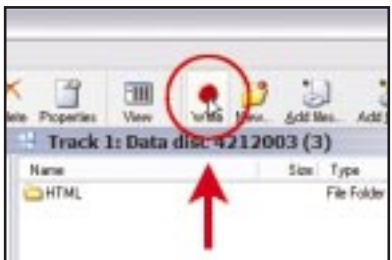

Copying A CD

 
 
 


1. Start Pinnacle Instant CD/DVD and select CopyBackup>Copy from the menus.

2. Select your Source drive from the left menu, and the Destination drive from the right side menu. Insert your blank media into your burner drive and click Start to begin burning.

3. A progress bar will show your current CD copy status.

4. After writing is completed successfully, click the OK button.

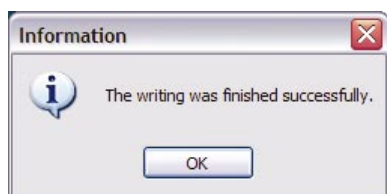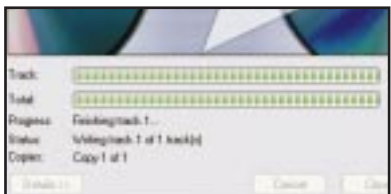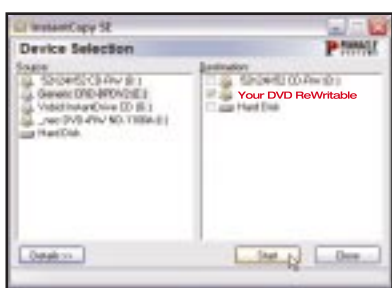

(Note: You should select the proper burn speed for your media, most media today is 2.4x)

Using Pinnacle Expression

Pinnacle Expression is the easy and fast way to author your DVDs and CDs with a simple easy to use interface. Pinnacle Expression is installed along with Pinnacle Instant CD/DVD. To access Pinnacle Expression, click on your Start menu, select Programs > InstantCD/DVD > Video > Pinnacle Expression .

Using Pinnacle Expression

Pinnacle Expression is broken up into 4 basic steps. Capture your video, Basic Video Editing, and Menu Creation, and Disc Burning.



1. Capture your home videos from your DV camera or Import movie clips and image files from your computer.



2. Customize your Menus and Chapters with the included presets or import your own backgrounds. Even add your own music tracks for menus and chapter selections.



3. Basic video editing features let you join and split movie clips and prepare your movie for burning. Even preview your projects with the included player.

4. Burn your video project to DVD or Video CD to share with your friends and families or to preserve your precious moments captured on video. Then prepare custom DVD/CD labels and inserts to give it that final touch.

Pinnacle Studio 8 SE Installation

Introducing Pinnacle Studio 8 SE: the total video-editing solution for your desktop. Capture your video footage and then use the professional editing features like scene transitions, title effects, and fast/slow motion to create compelling movies. Add professional audio tracks to your projects just like the pros. After you've edited your video, output to tape or burn your movies to a CD or DVD that will play on most living room DVD players.

Installing Pinnacle Studio 8 SE

1. Insert the Pinnacle Studio 8 SE CD into your CD-ROM drive.

2. The Installation program will appear. If your CD does not autorun, double click on Welcome.exe from the CD s root directory to begin the installation. Select your language preferences and click OK to continue.


3. The Installation Program should automatically begin the installation process.

4. Please input serial when asked to do so. (please use the serial number: 4662424003)

5. Restart your computer after installation is complete. Congratulations! You are now ready to use your new Pinnacle Studio 8 SE software.


Using Pinnacle Studio 8 SE

Pinnacle Studio 8 SE is divided into 3 main parts. Import and then capture your video footage. Edit your video with professional tools and effects. Make your movie by burning to CD or DVD media. With advanced tools and a simplified workflow, your video projects come together quickly and easily. Extensive tutorials and help files walk you through every step of the process. To access the video tutorials, click on Help > Guided Tours from your Studio 8 SE start menu.

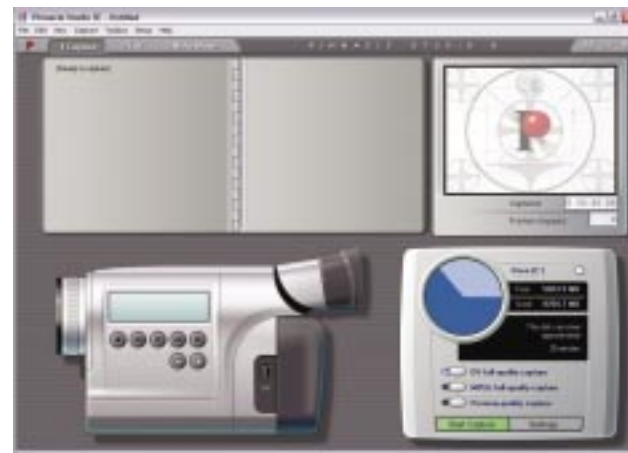

1. Your first step is to capture video from your existing movie files, VCR, or DVD camera. Import image files from a wide variety of formats to make custom slideshows. Or capture and record directly into your Studio 8 project from your DV camera. Simply connect your devices, and hit the capture button.

2. Pinnacle Studio software allows you to drag-and-drop your captured video footage onto the editing timeline and assemble a movie in mere minutes. Add custom music, transition effects, titles and menus. Then add professional 3D scene transitions, some background music, a couple of title effects, and get ready to show the world your finished masterpiece.

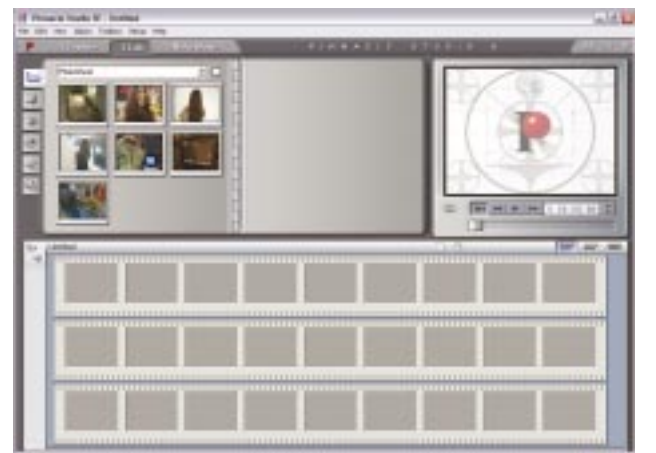

3. Share your special moments with family and friends on DVD! With Studio version 8 you can burn a disc with your CD or DVD burner that will play in most set-top DVD players. Plus, there are advanced authoring features that allow you to create multiple linked menus, motion menus, and motion buttons. Now you can turn hours of home video into Hollywood-style movies on CD/DVD that no one will want to miss. Studio 8 SE supports output formats ranging from VHS tape quality all the way to DVD quality. You can save your movies as avi or mpgs, windows media, real video formats for internet streams.

Technical Support

Register Your Product

¥To register your product, go to <http://www.registeryourproduct.com> and click on the "register" button. This is the fastest way to receive the latest product information and updates.

Technical Support

¥ If you experience problems with this I/OMagic product, you can contact I/OMagic s Technical Support Staff at the following number: Phone: (714) 953-0675 (M-F 8:00AM — 5:00PM PST).



TigerDirect

